


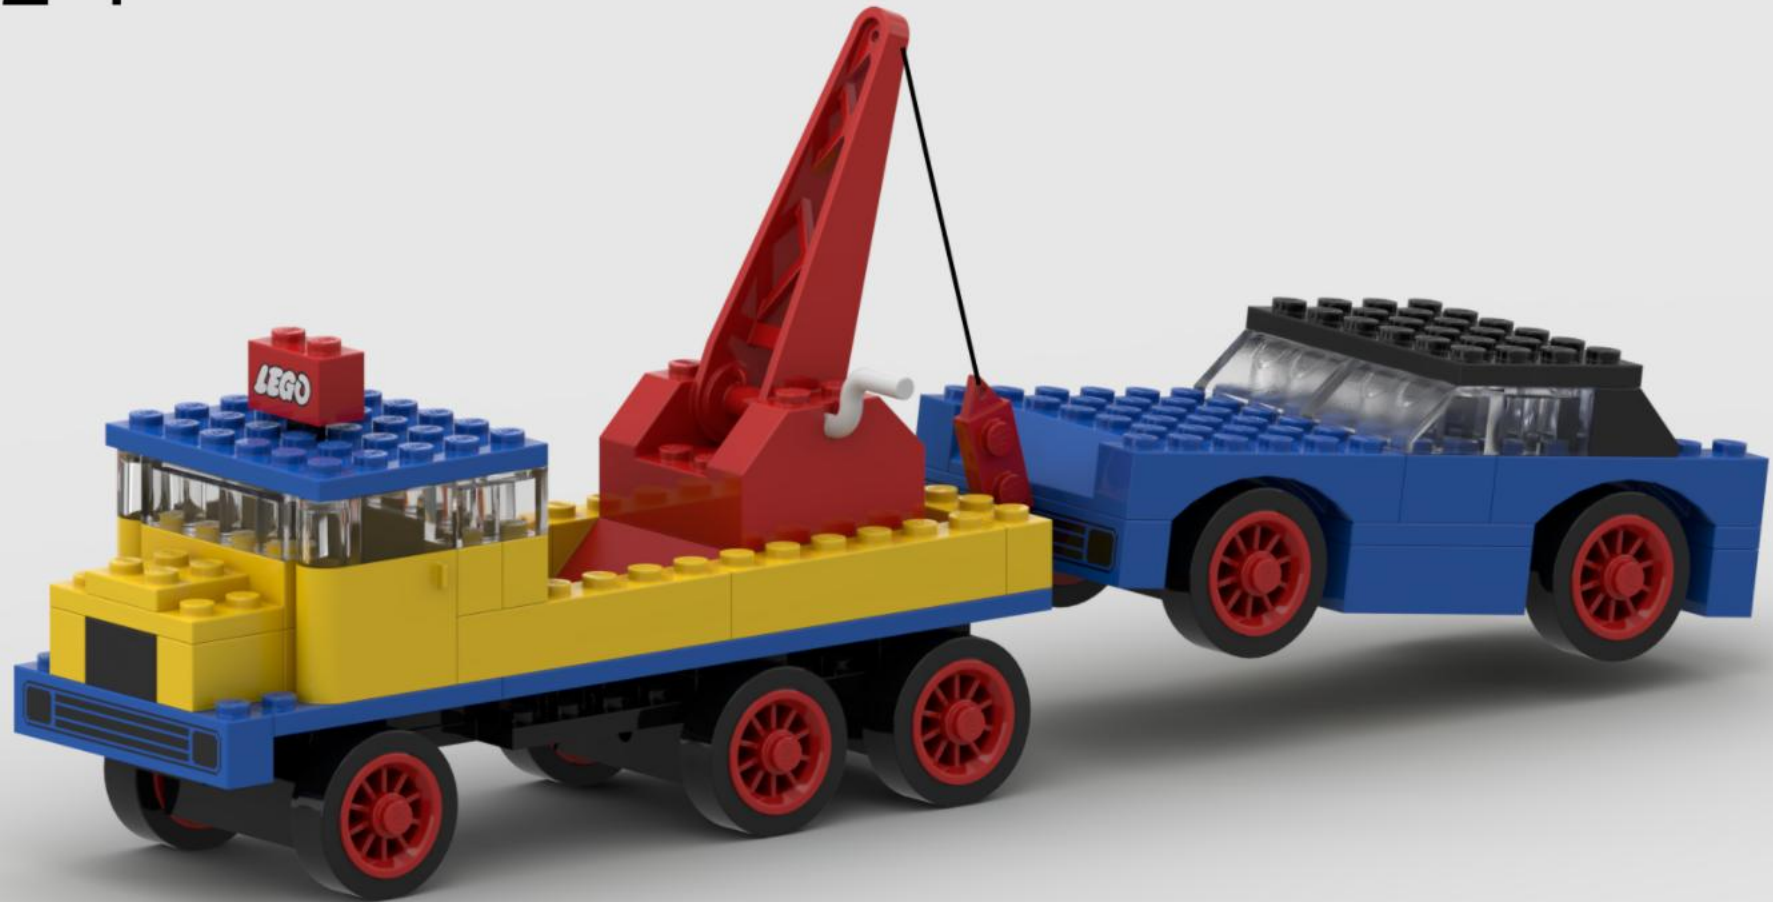


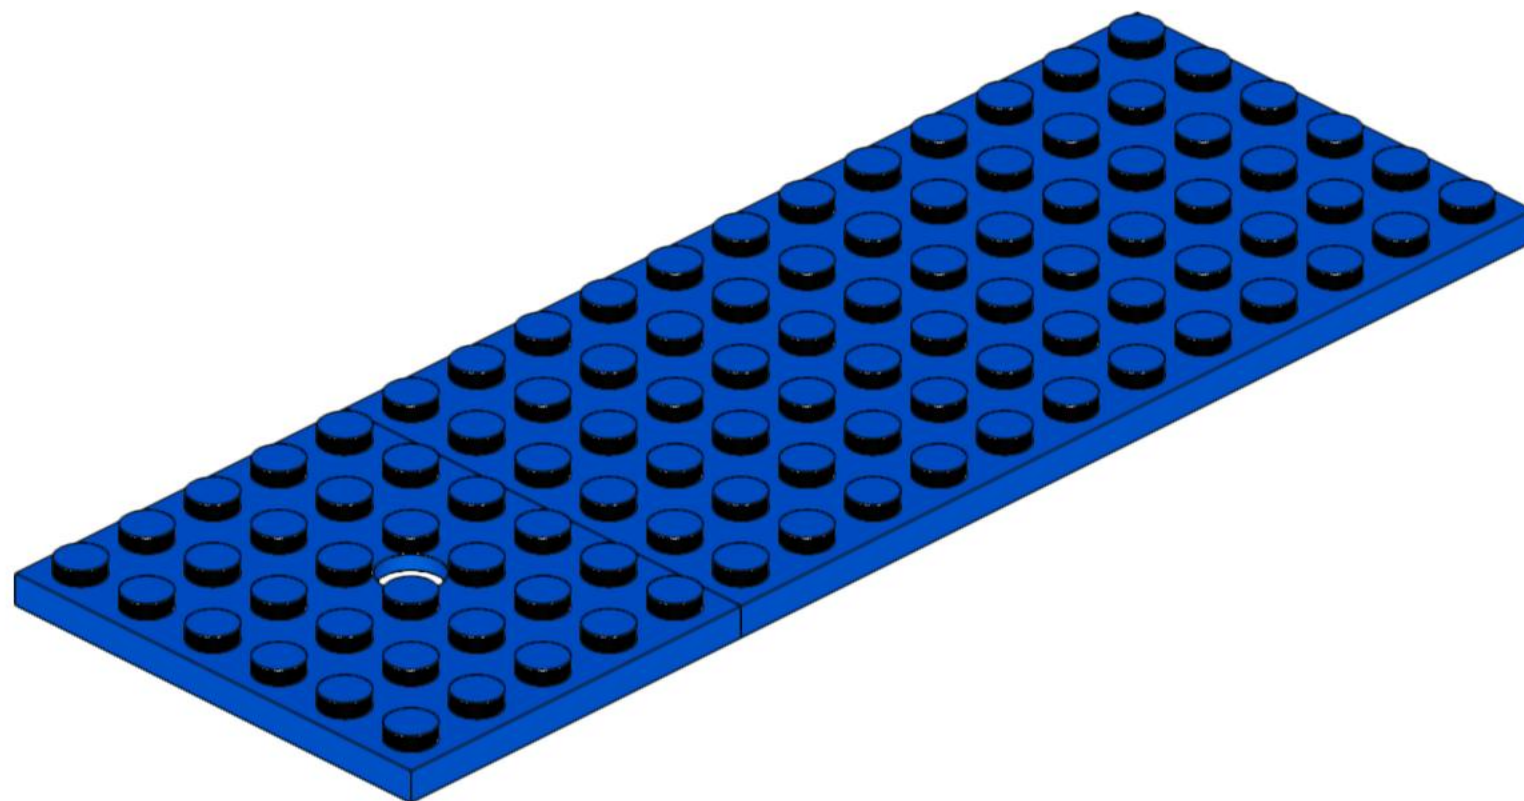



382-1

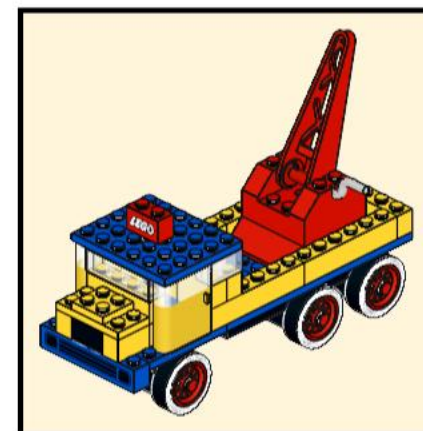



1

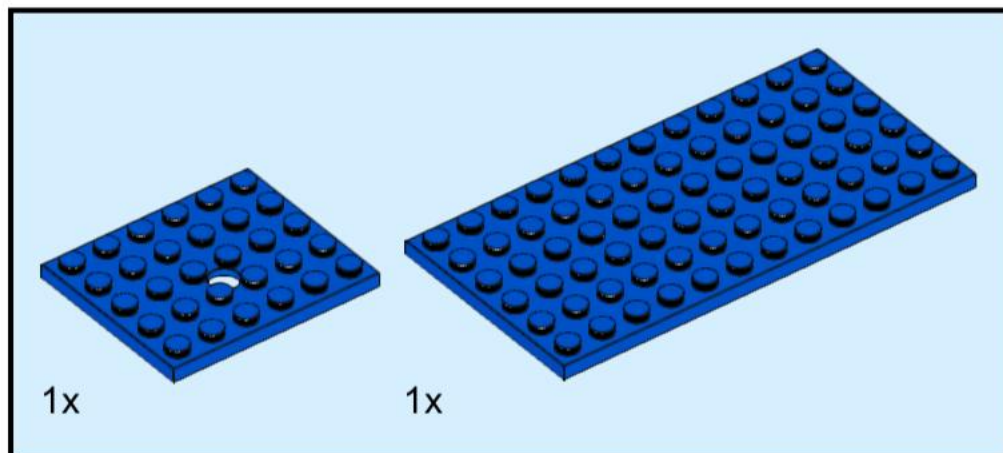



2

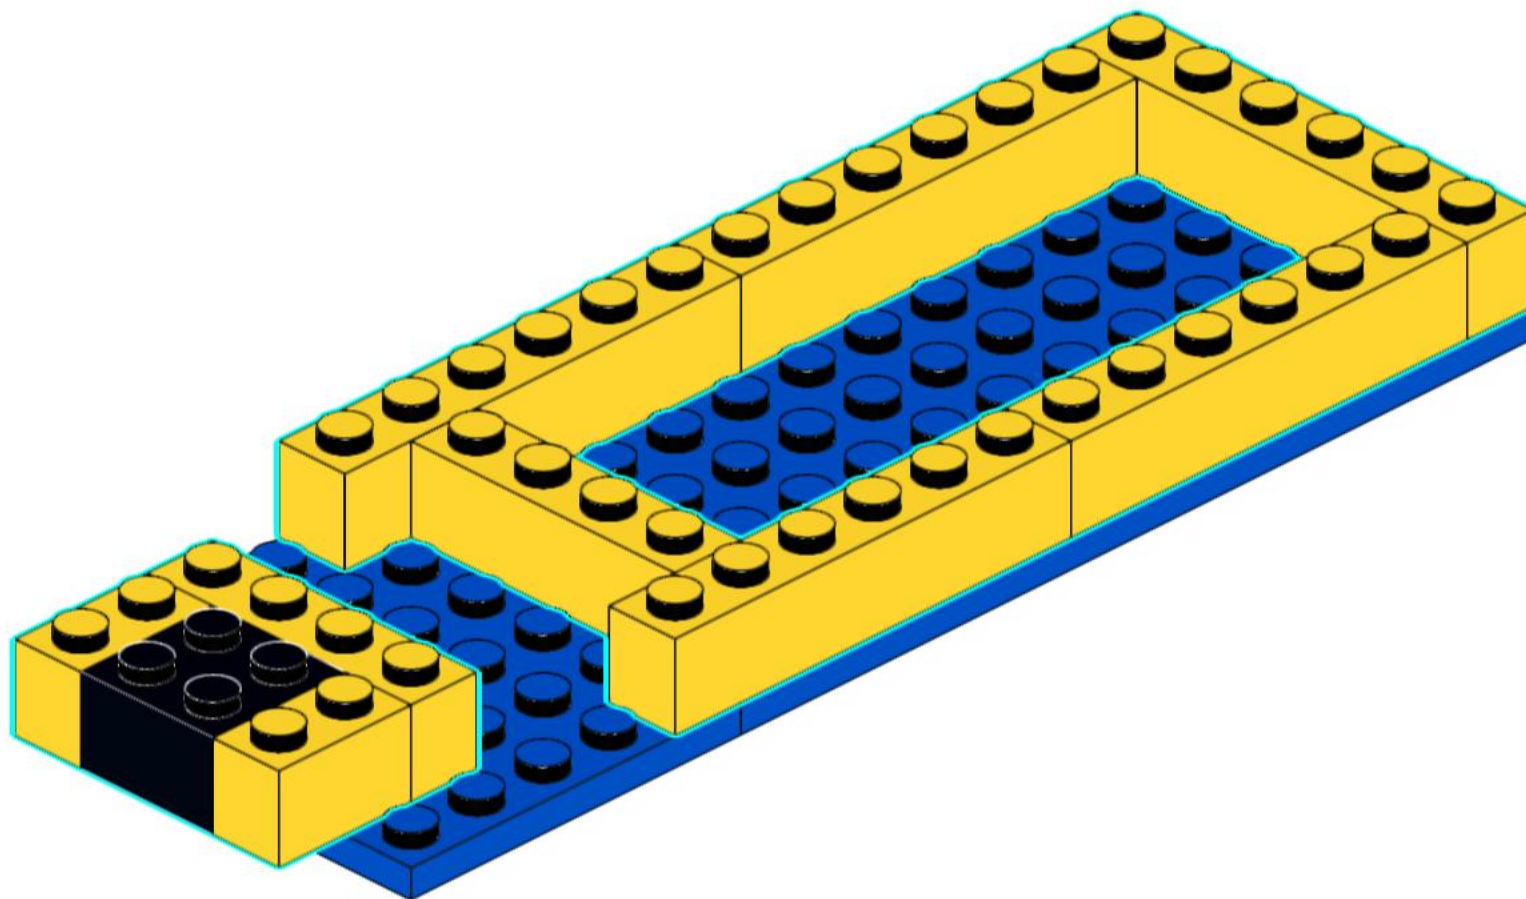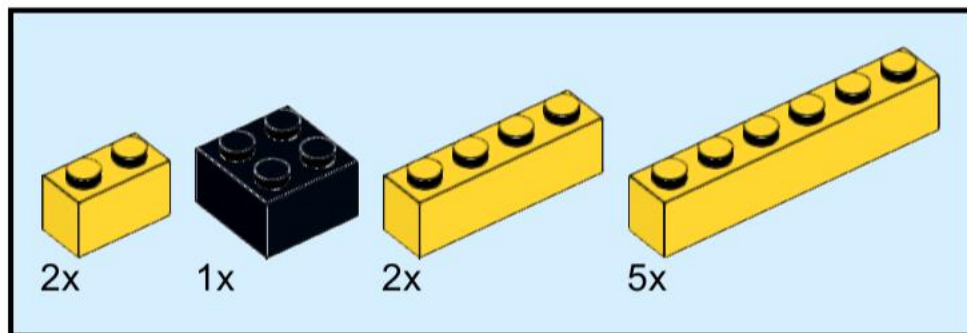


3

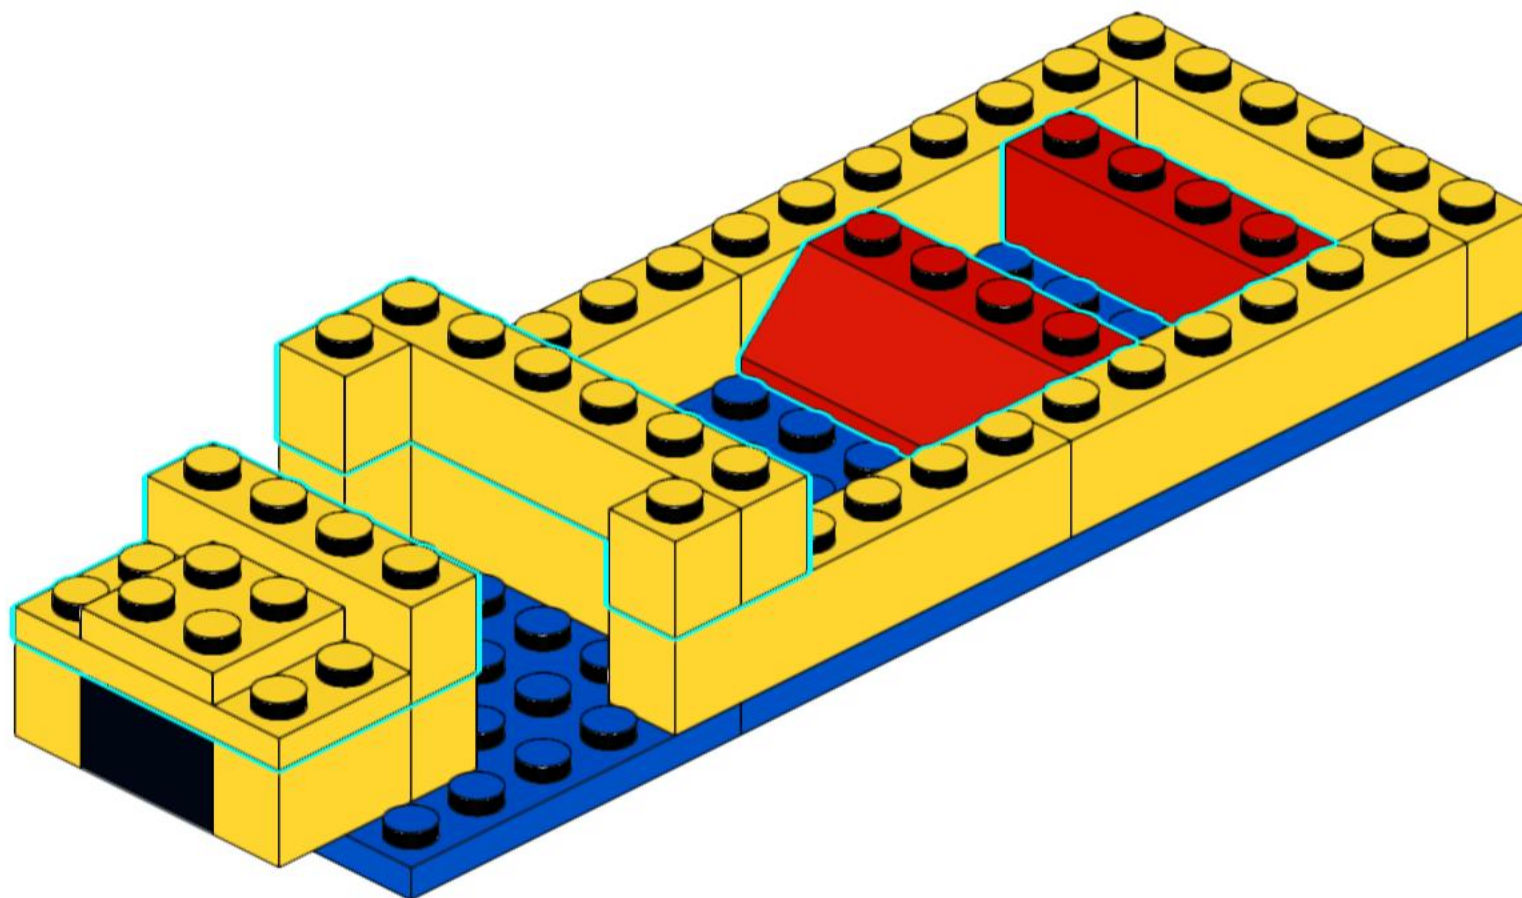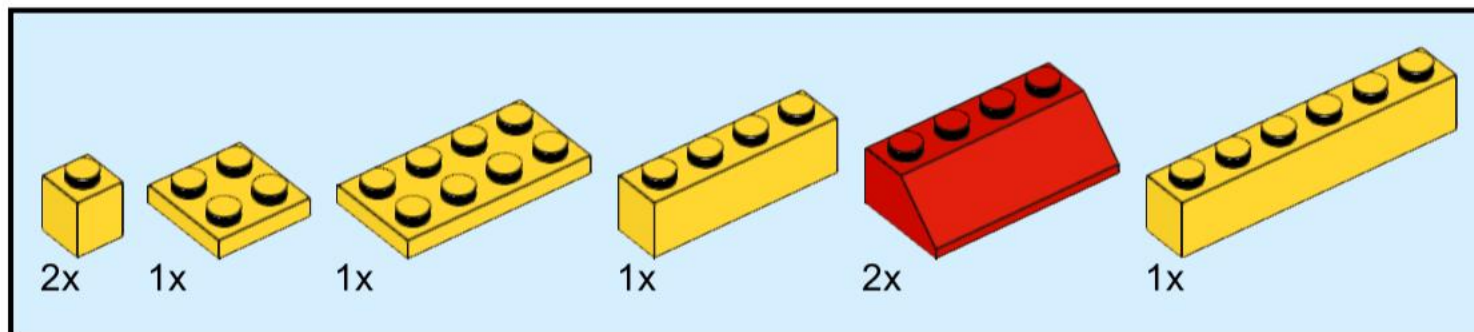



4

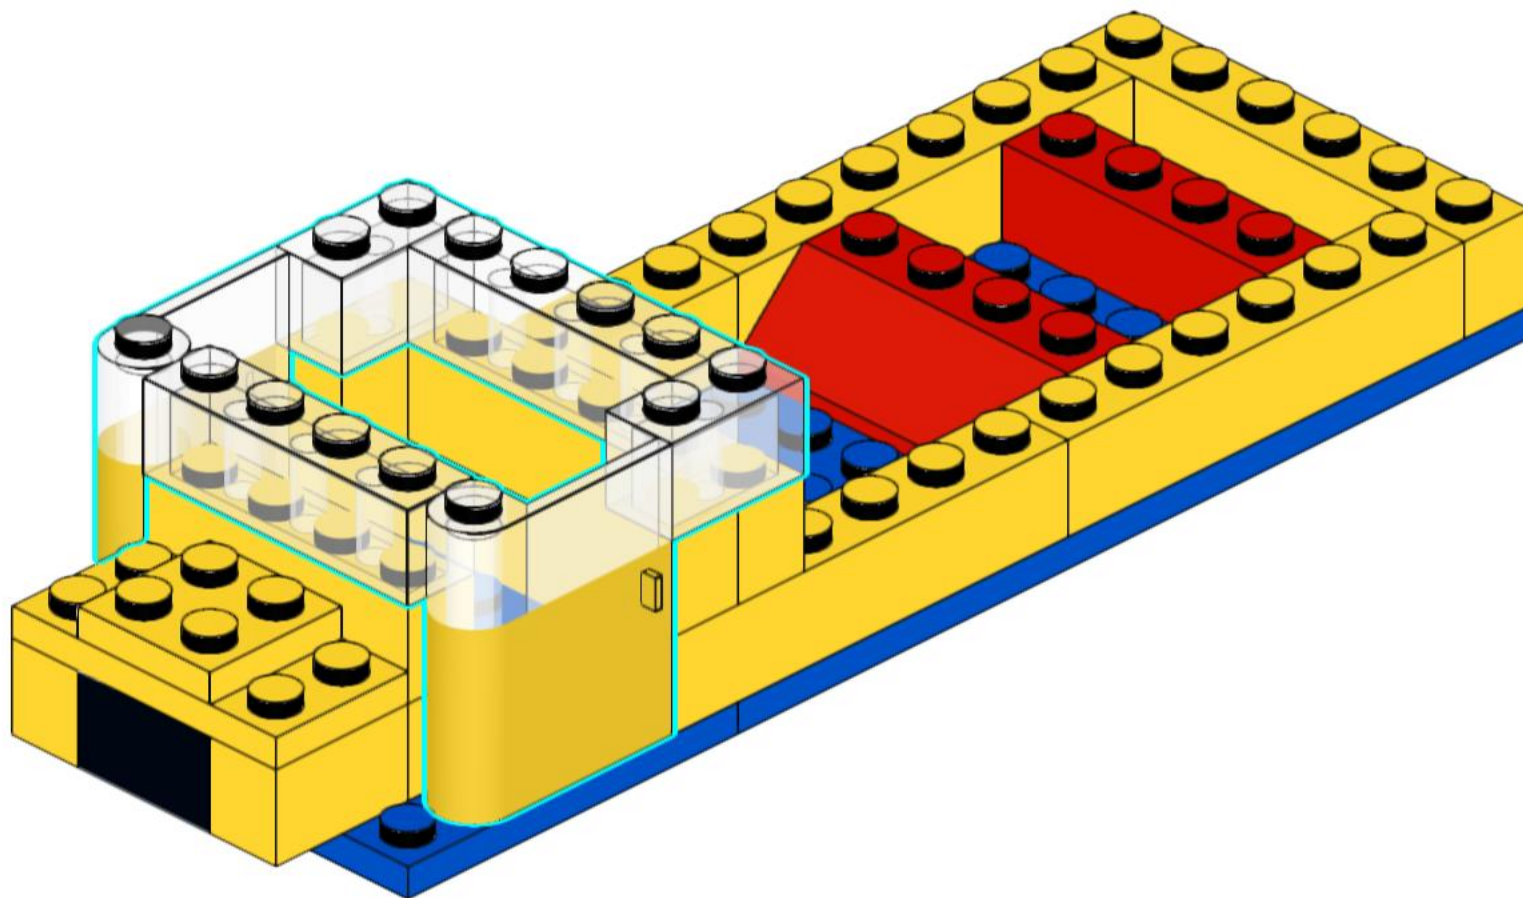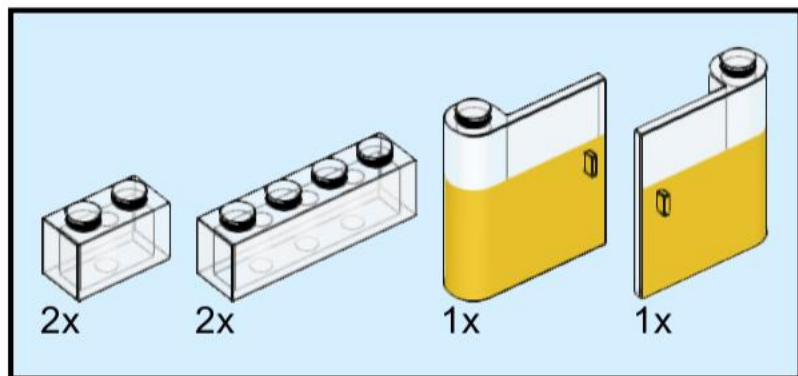




5

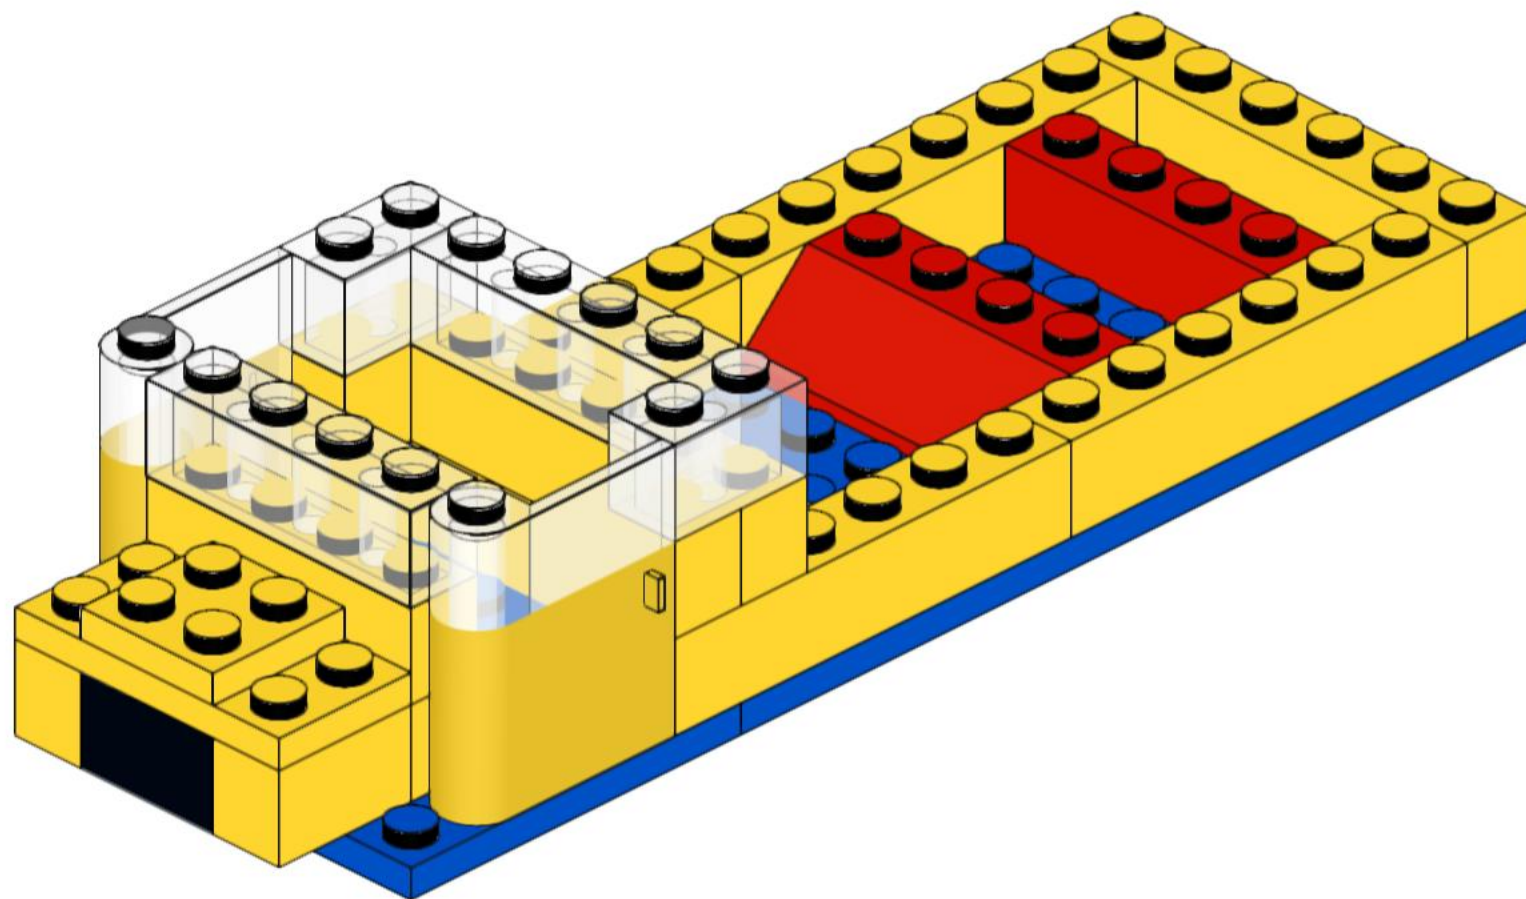



6

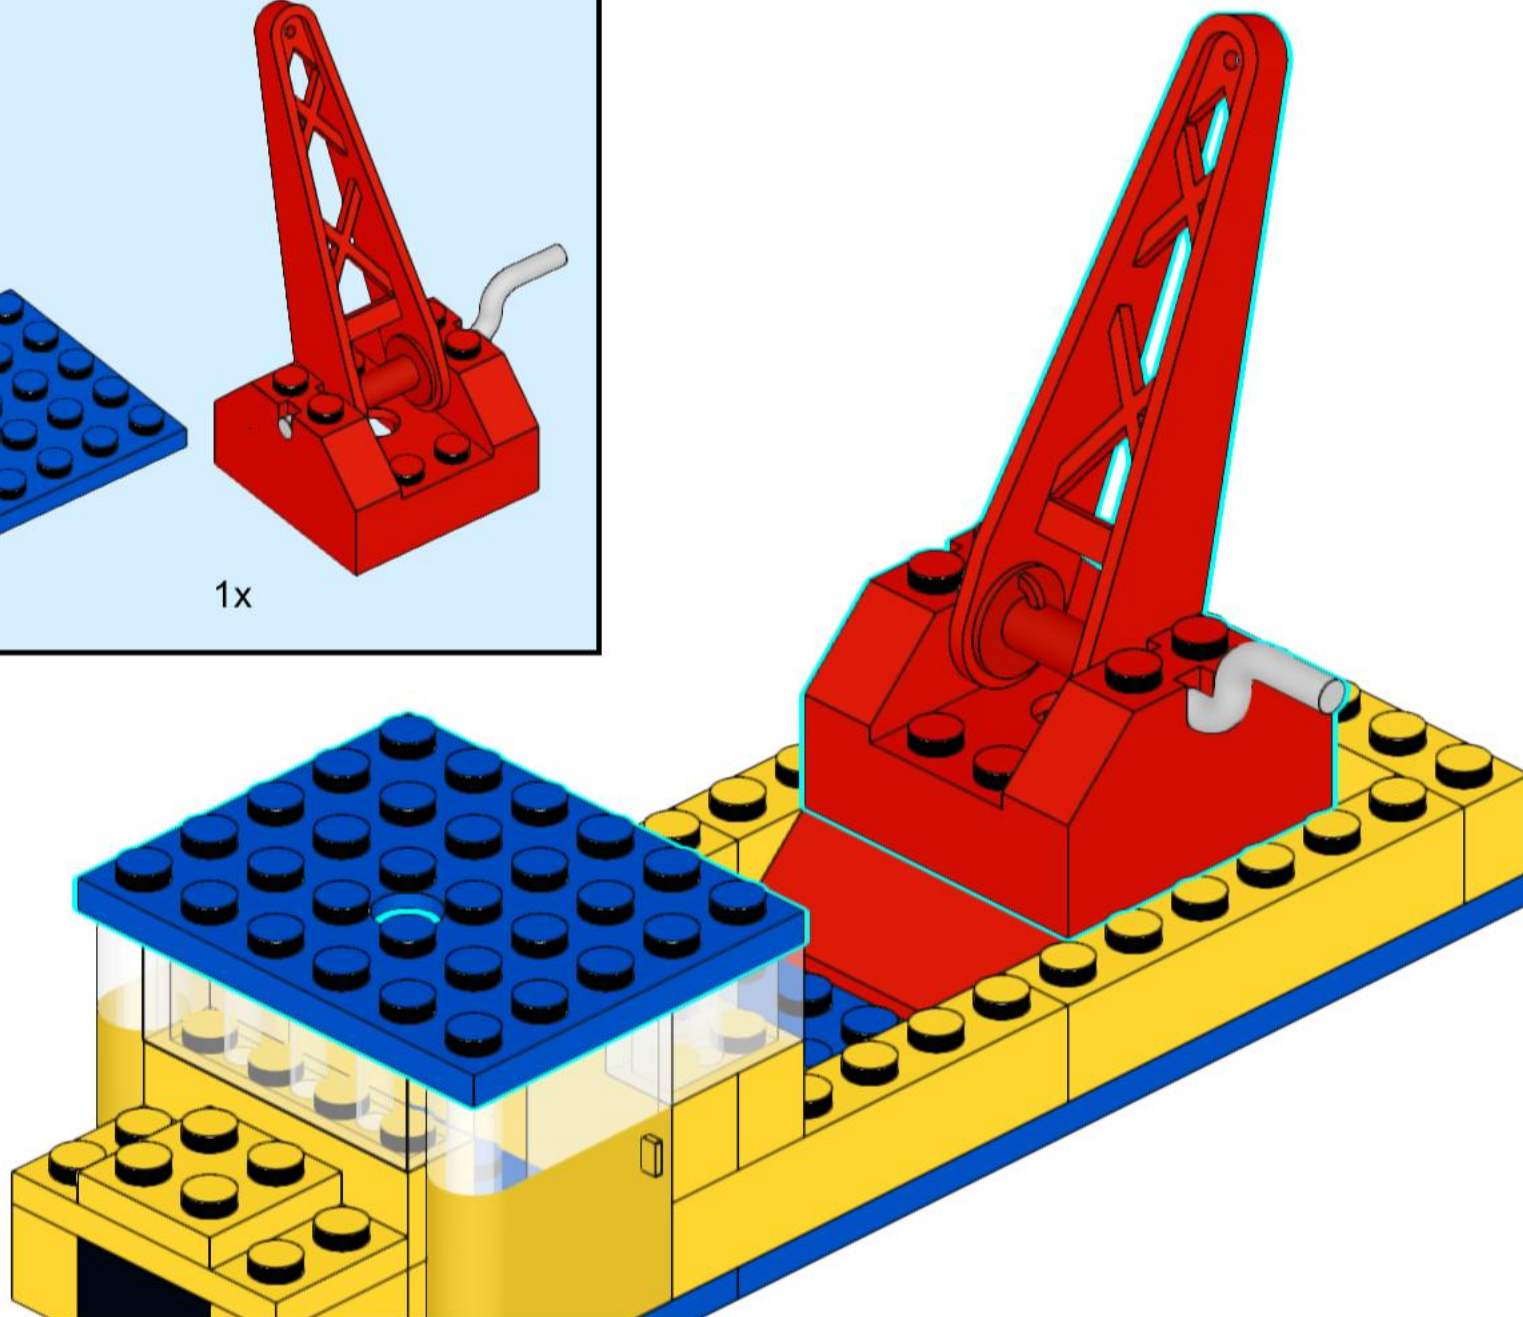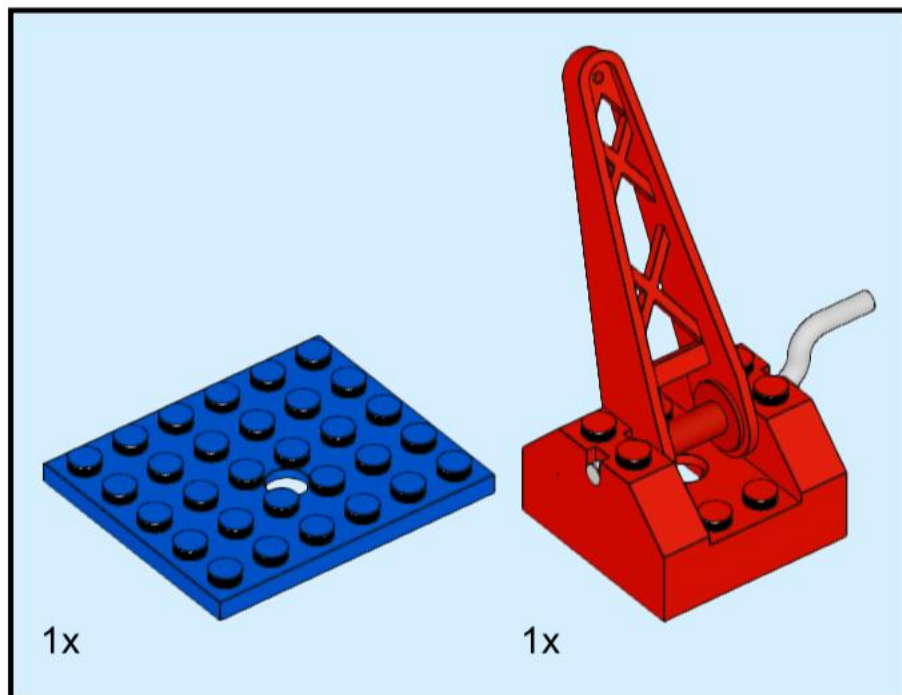




7

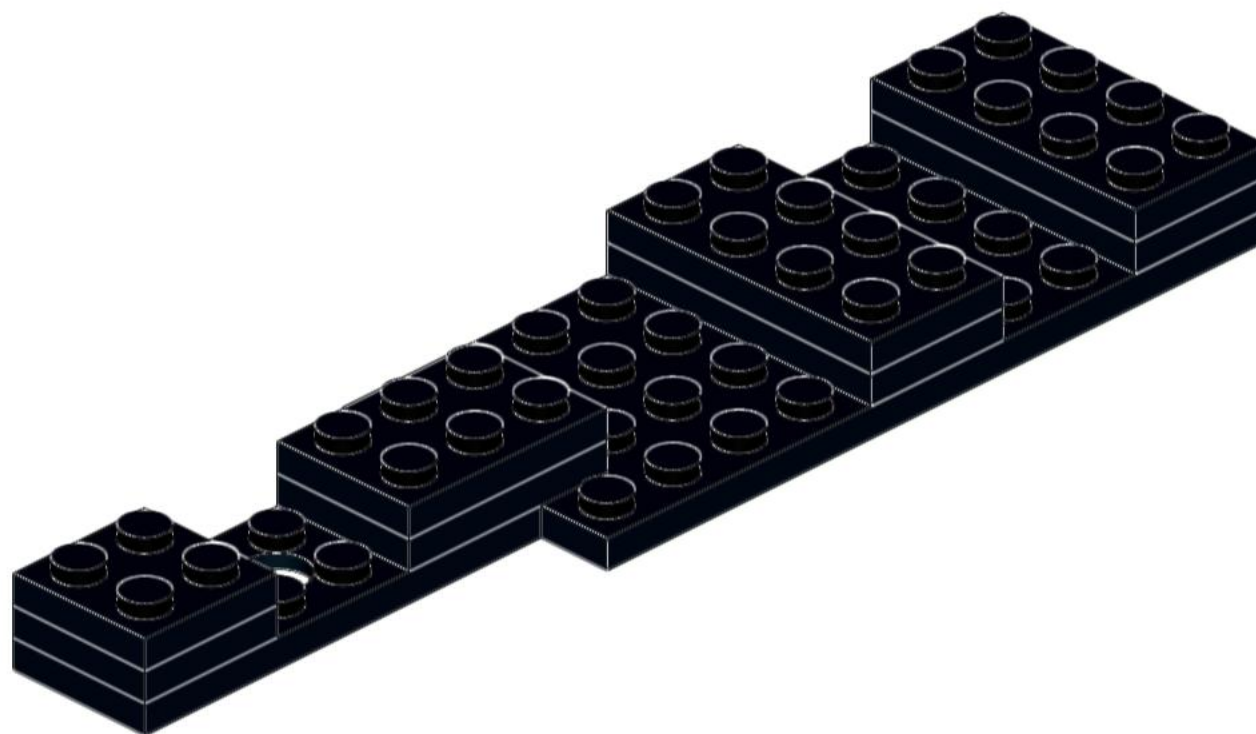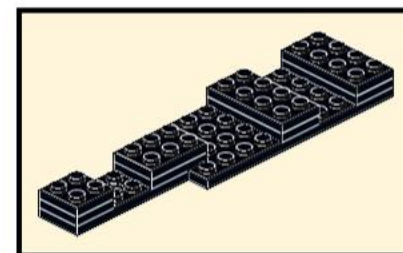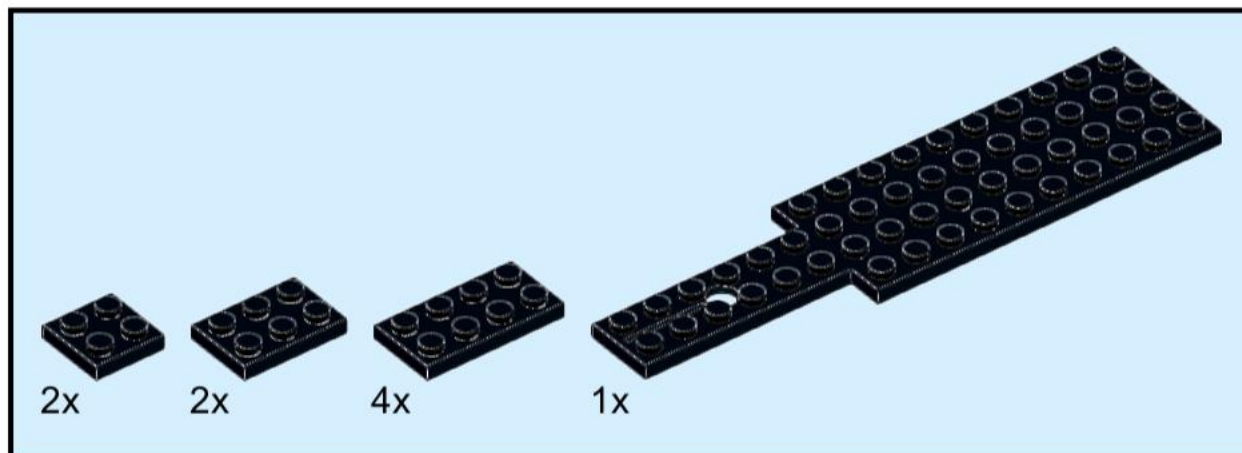



8

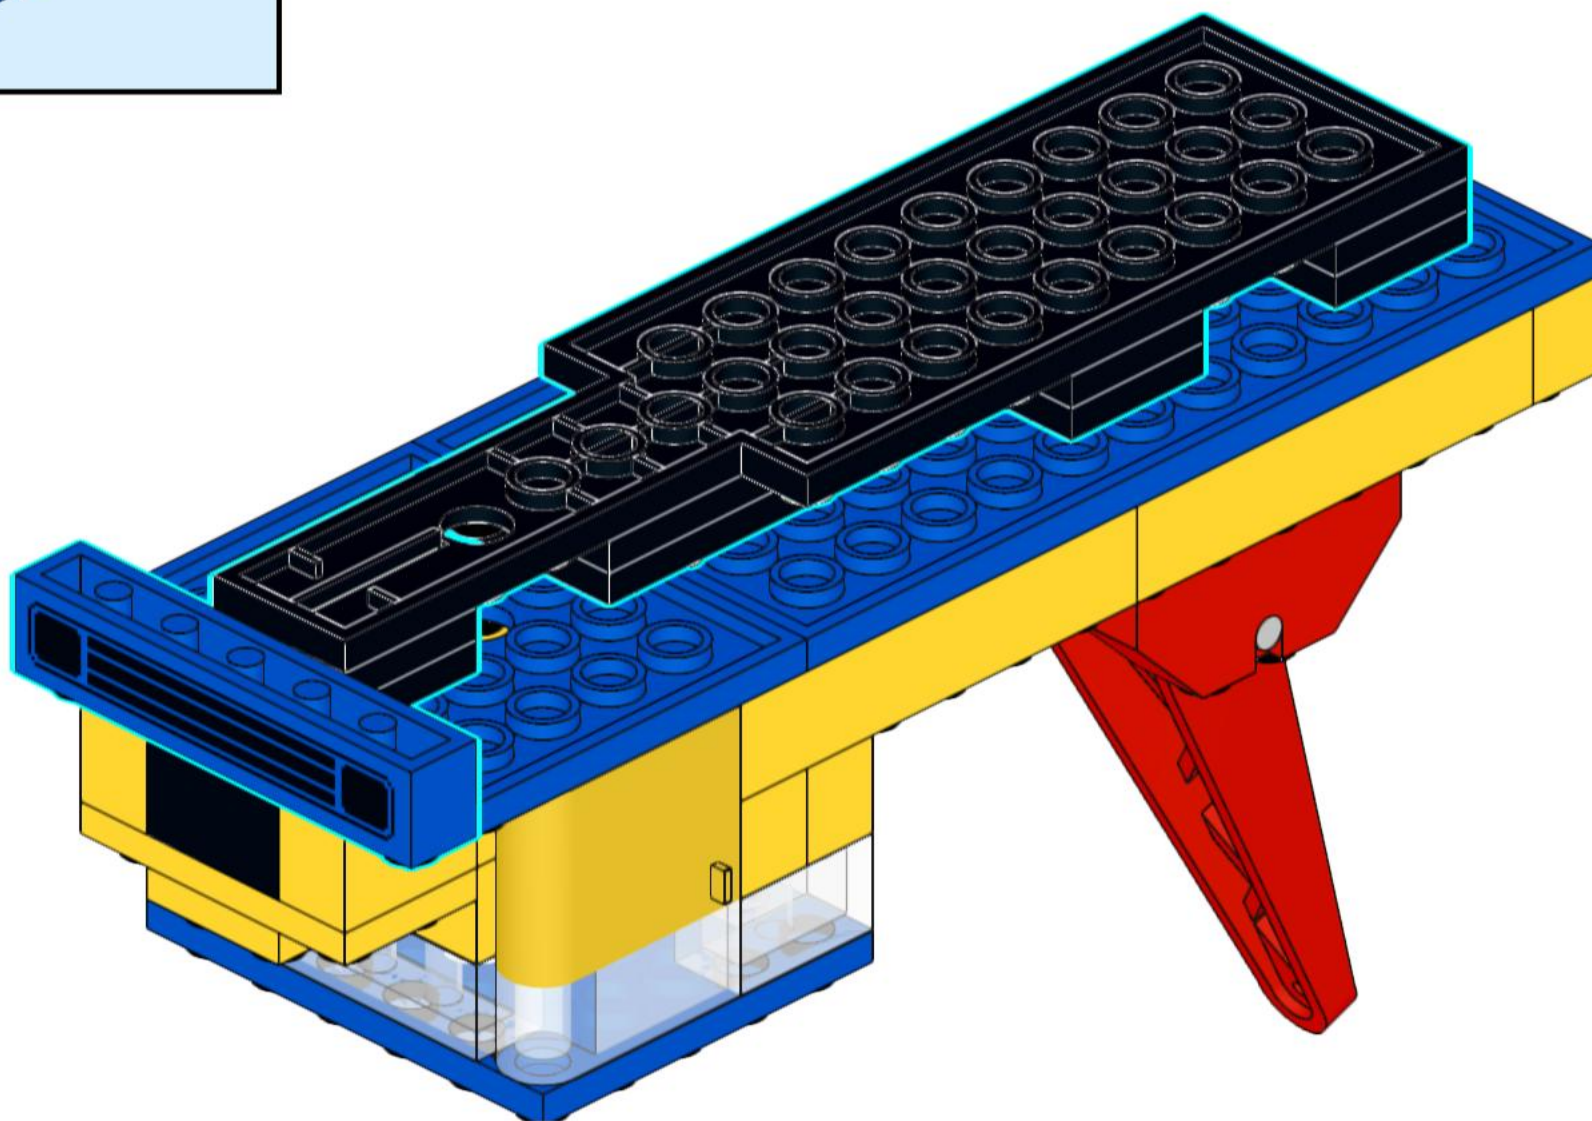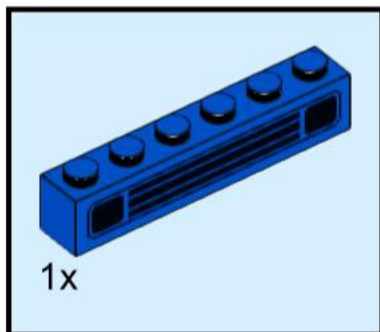



9

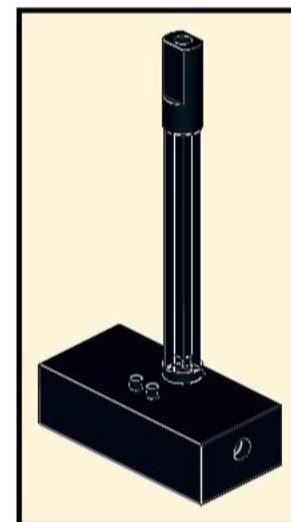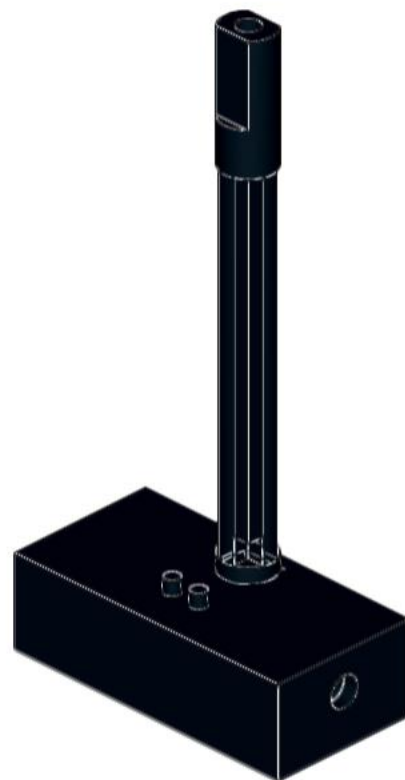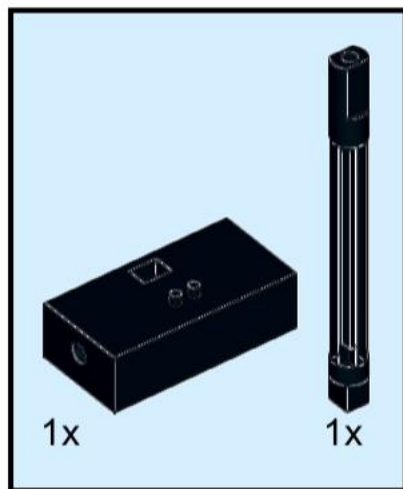


10

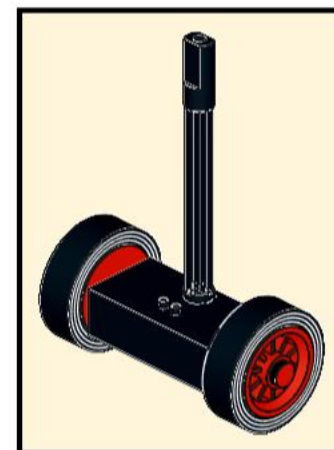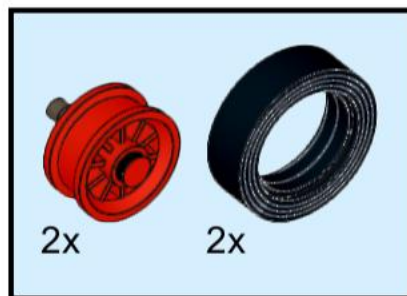



11

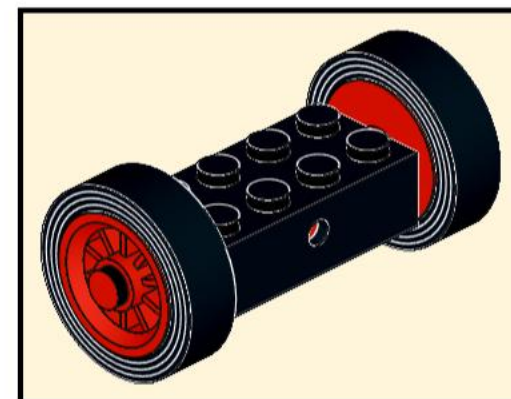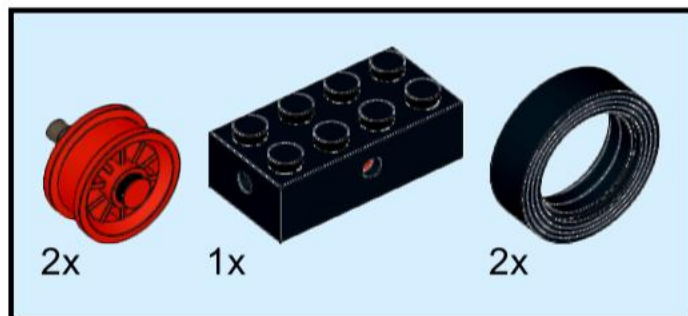


2x

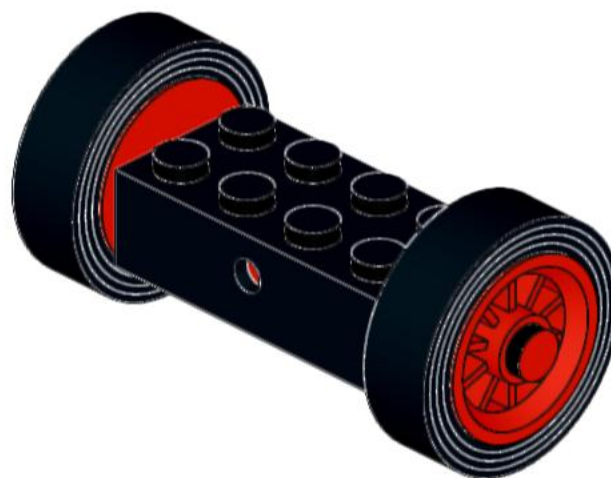




12

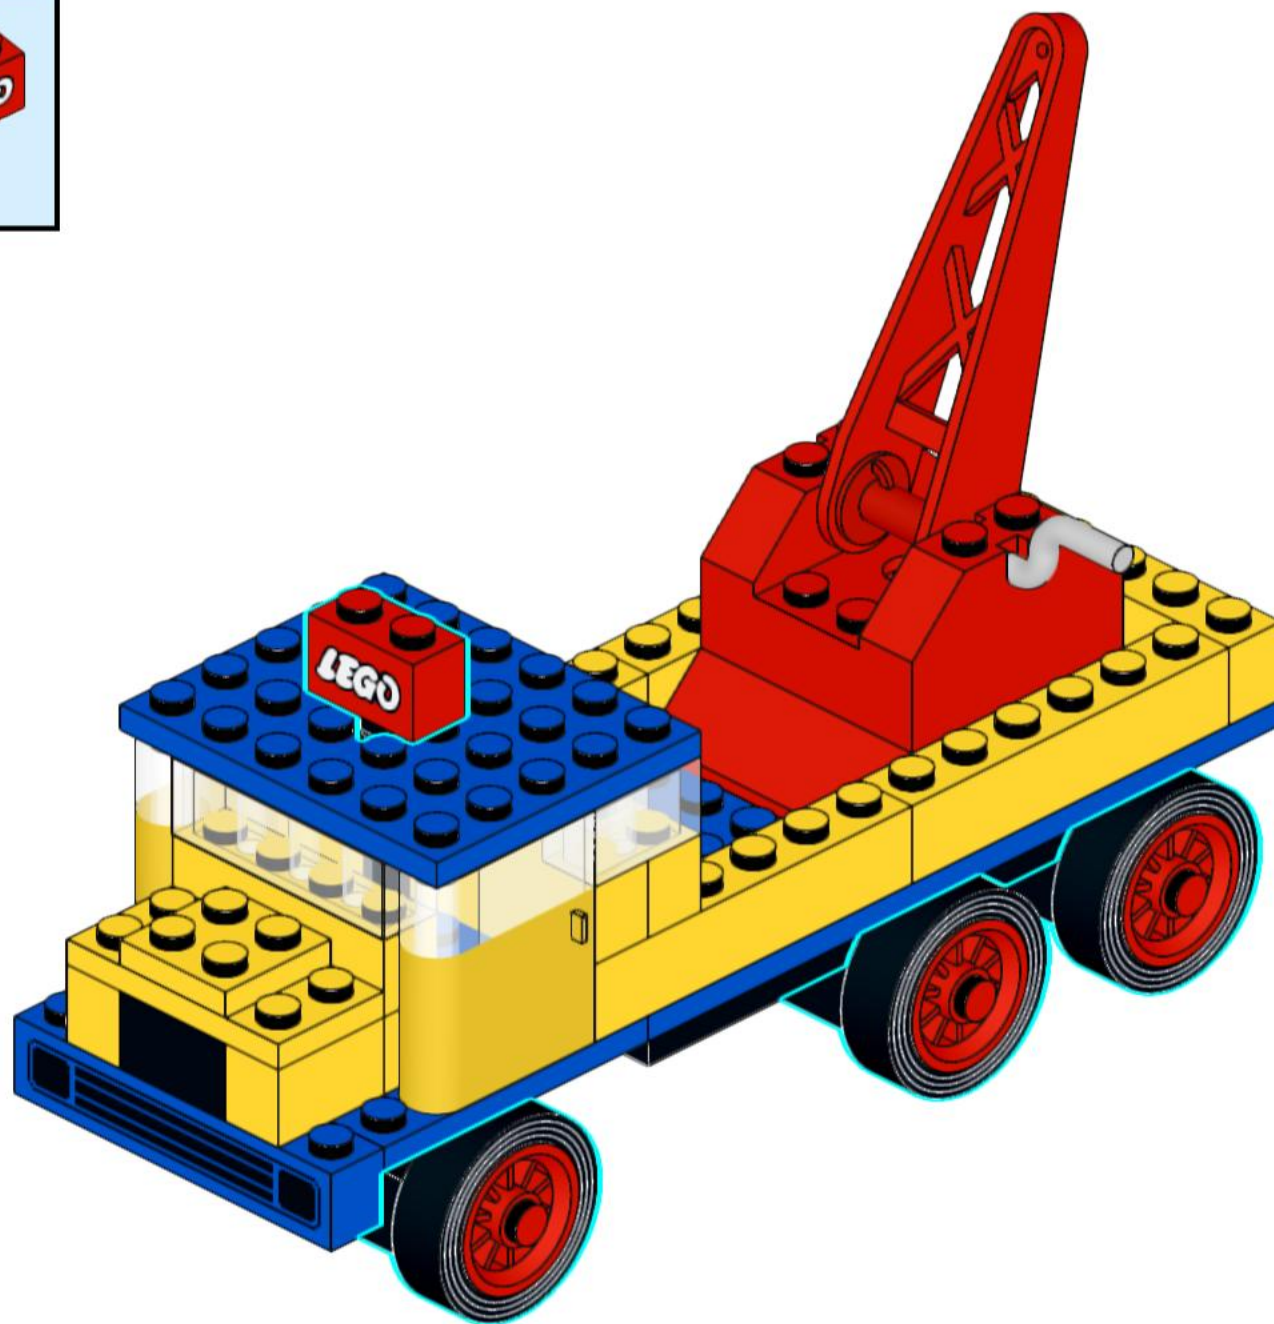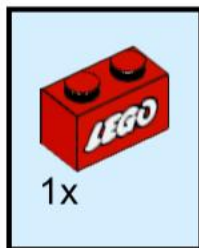



13

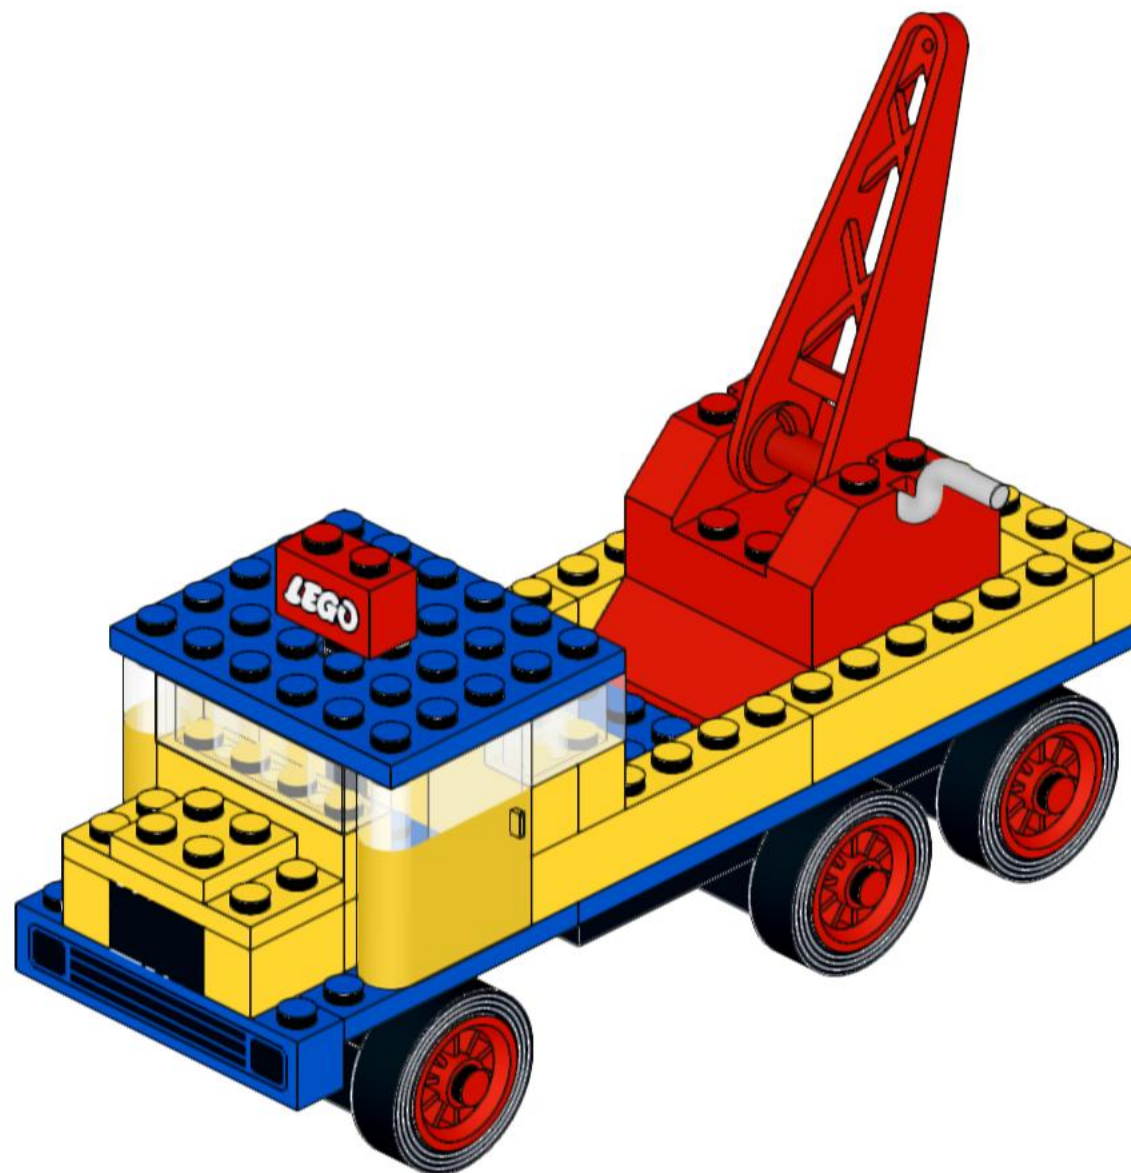



14

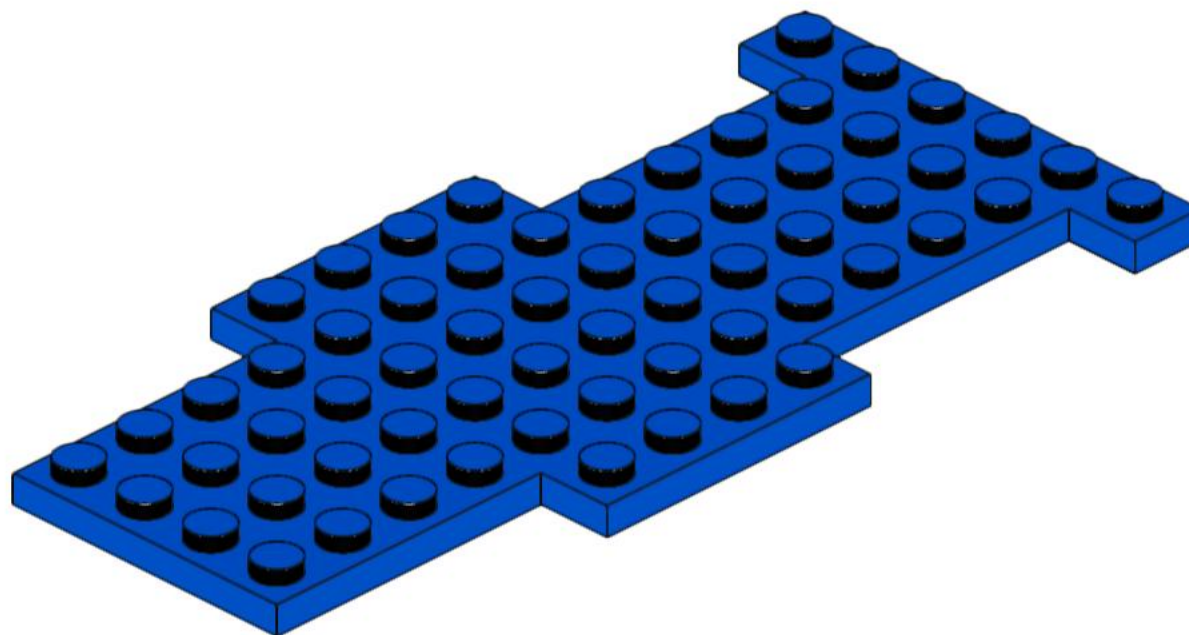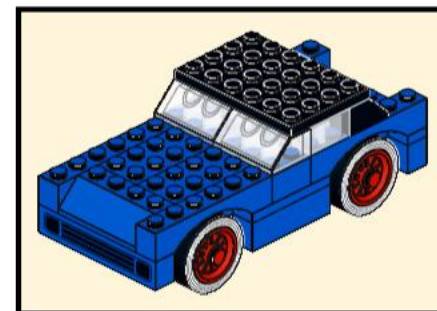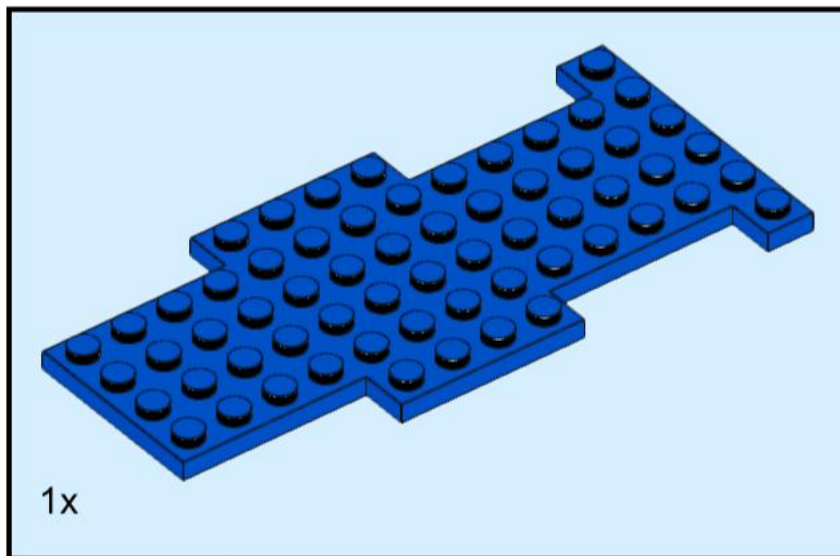



15

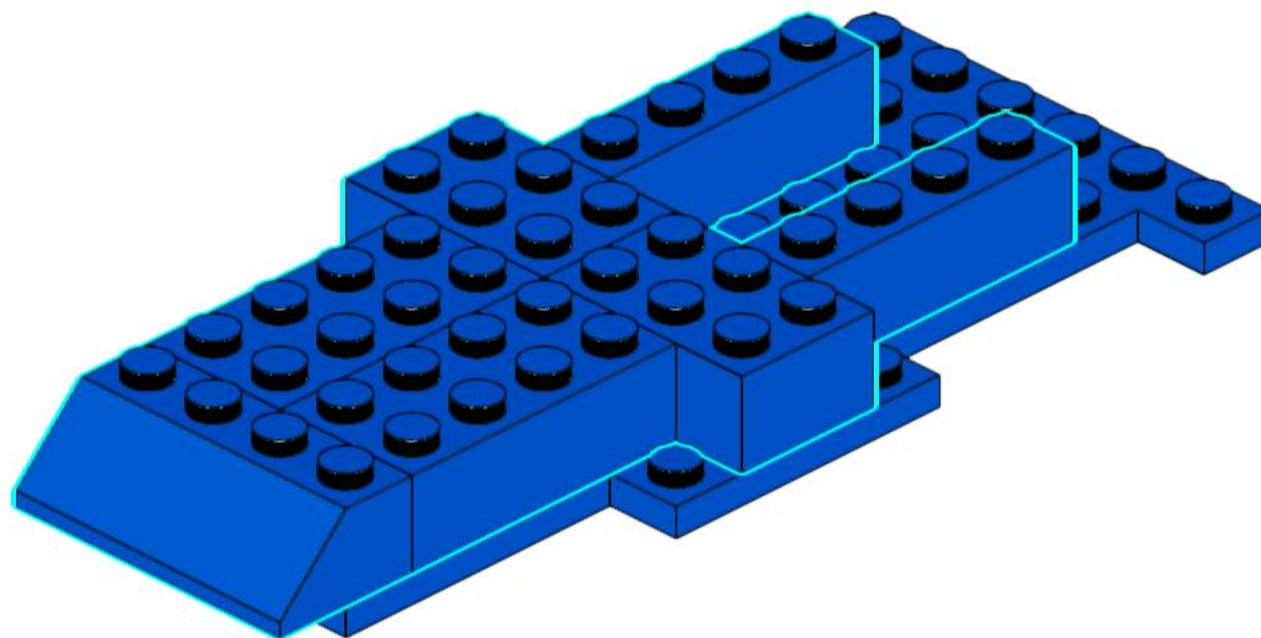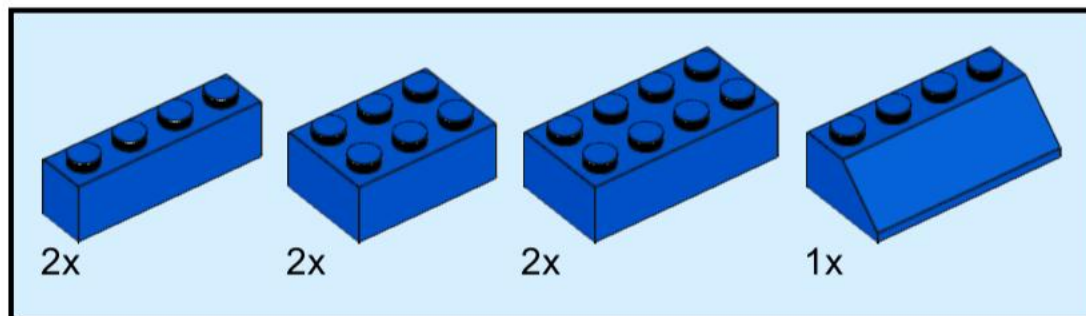



16

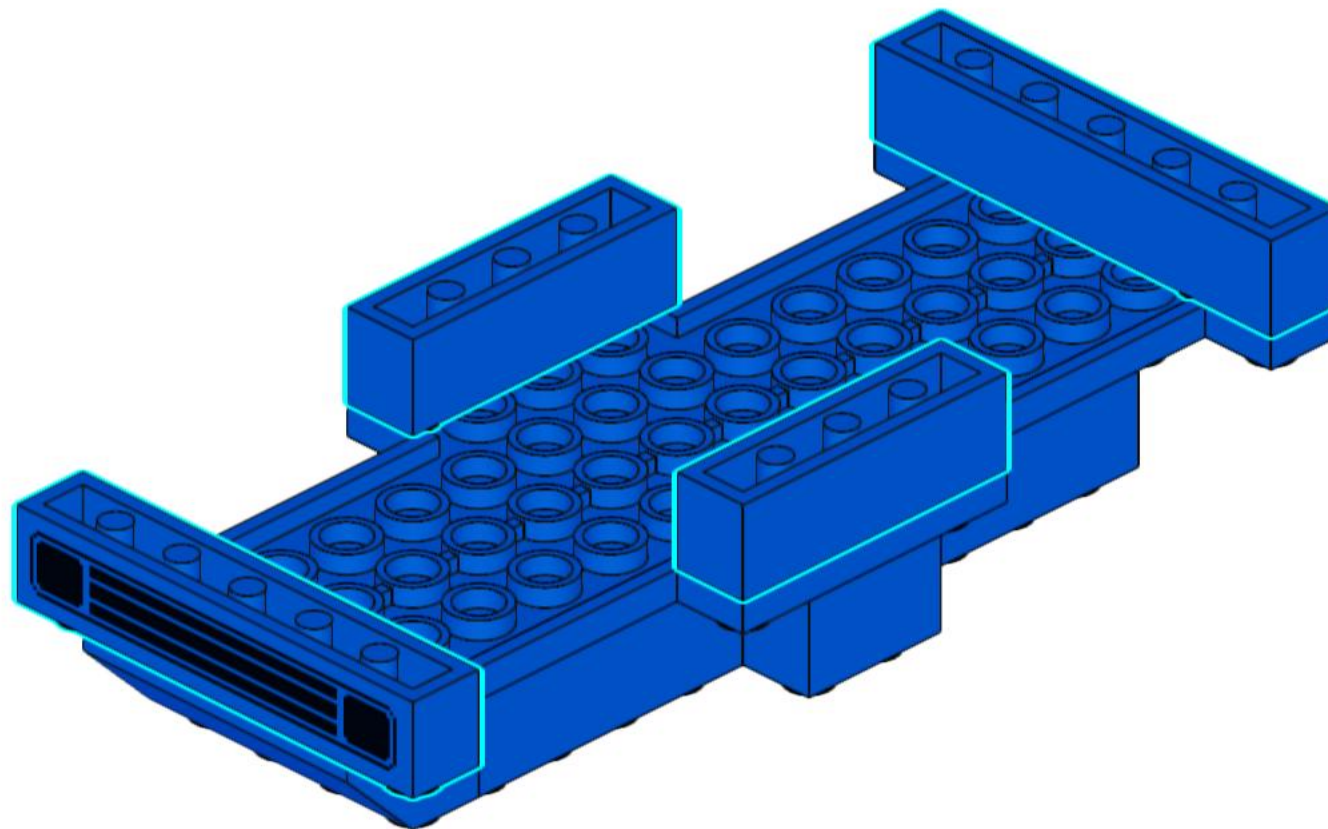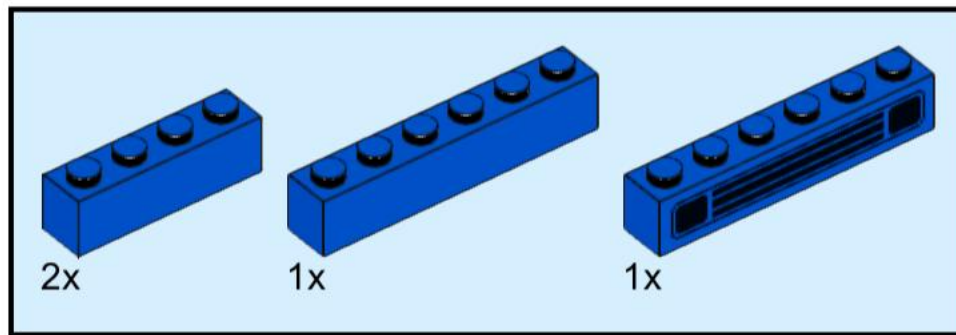



17

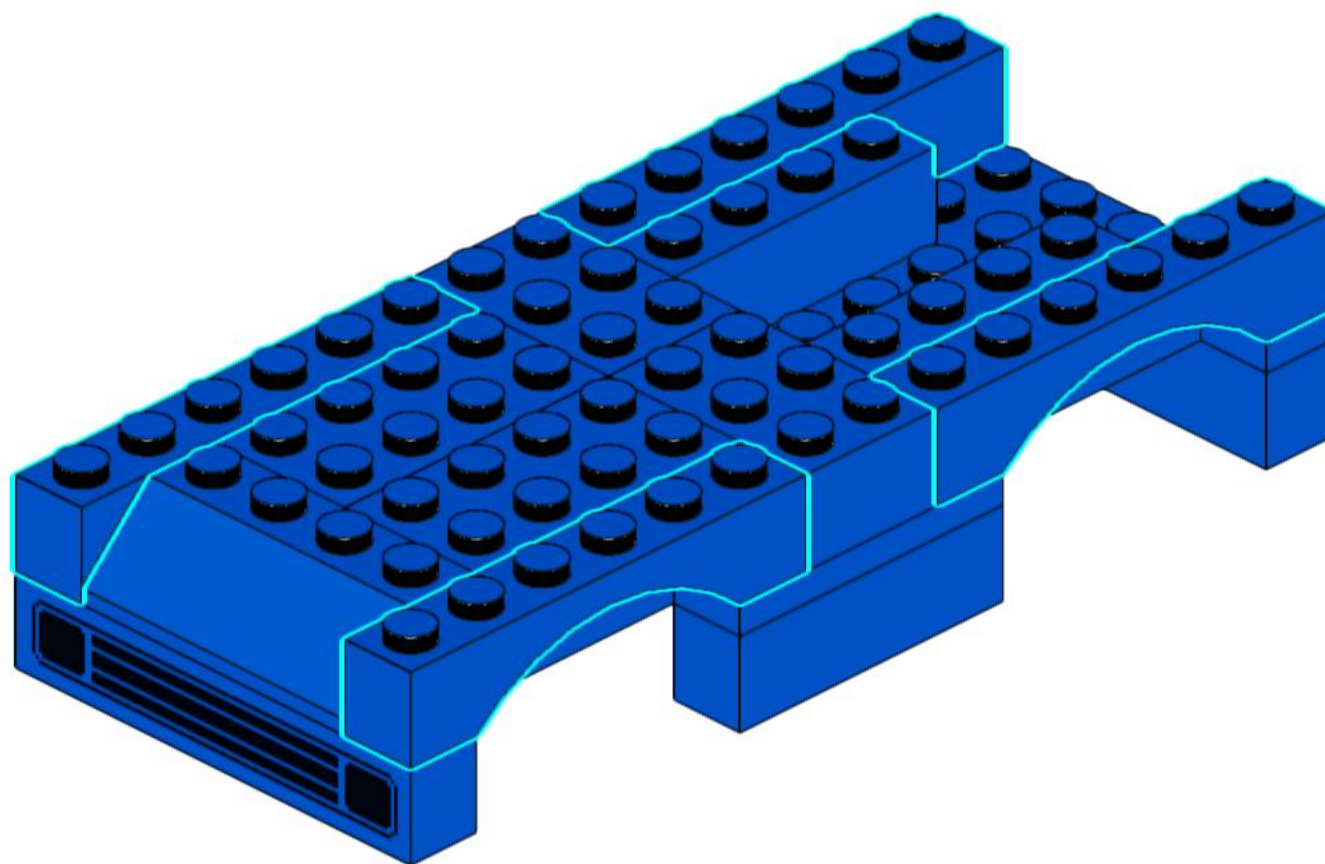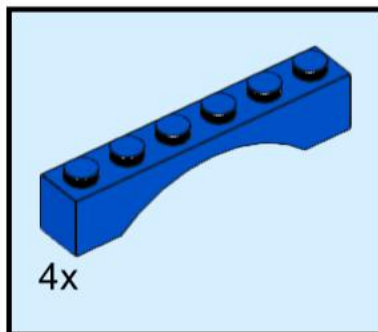


18

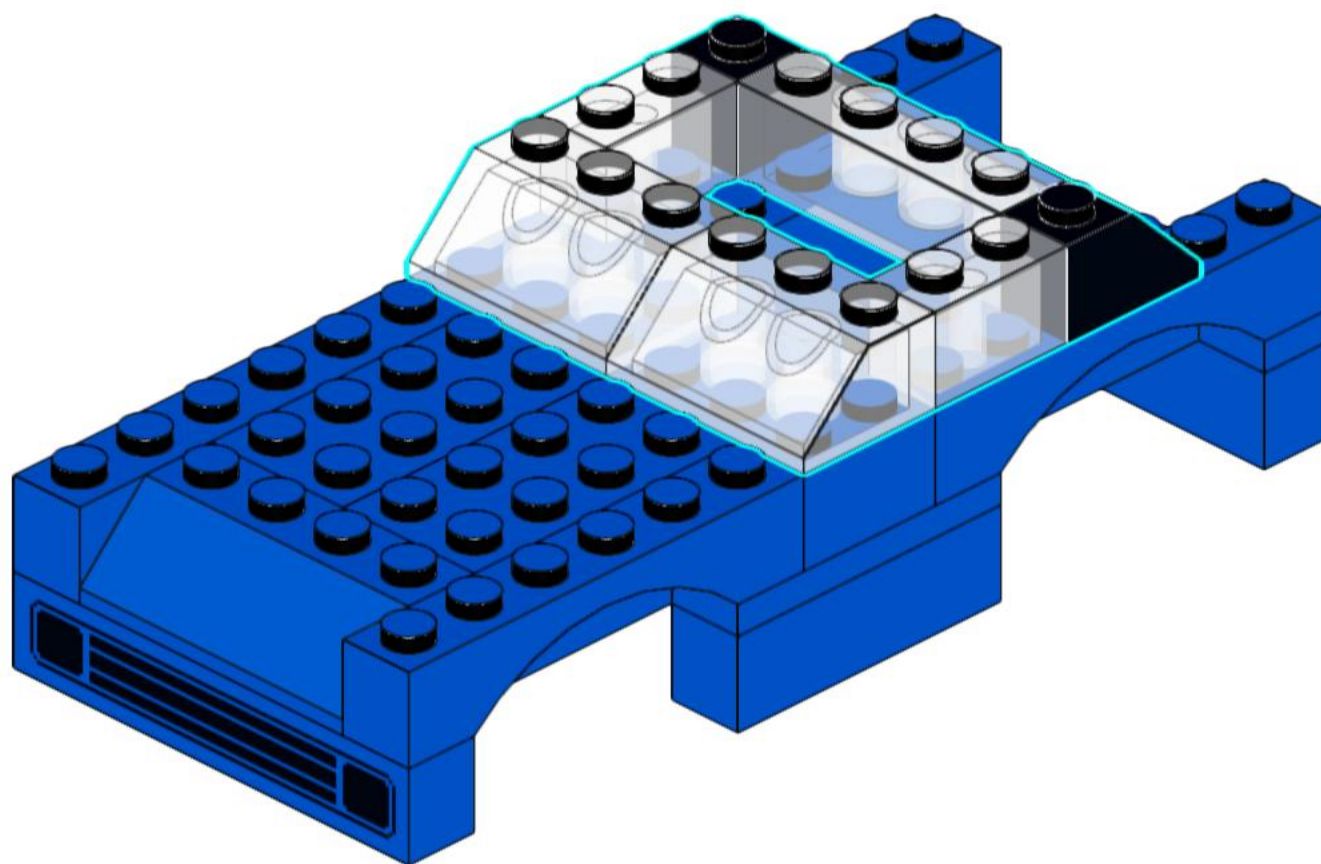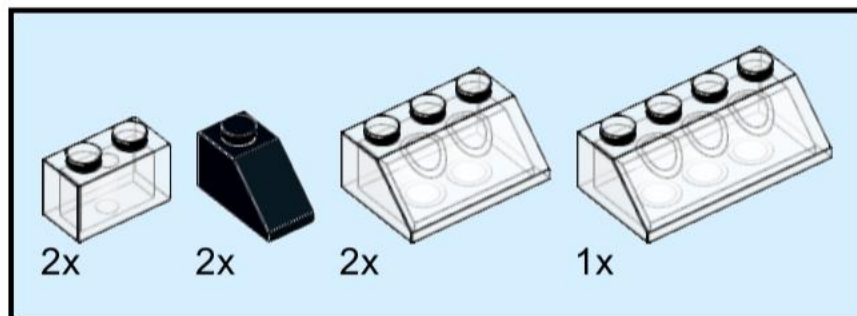



19

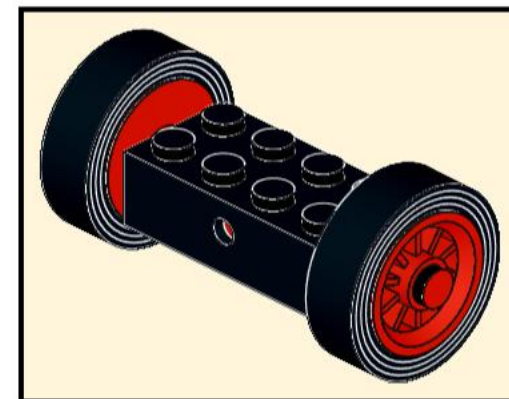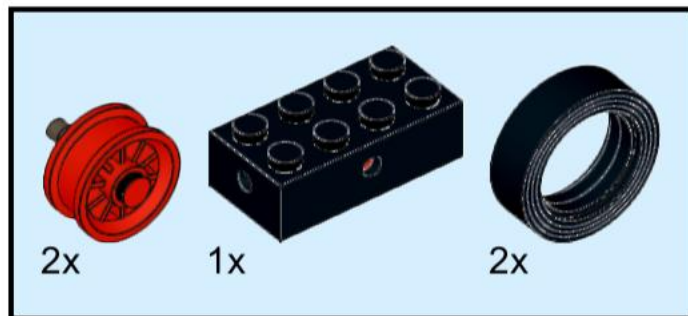


2x

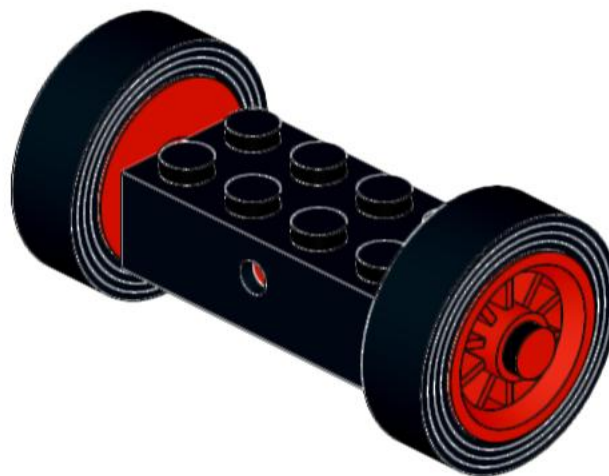



20

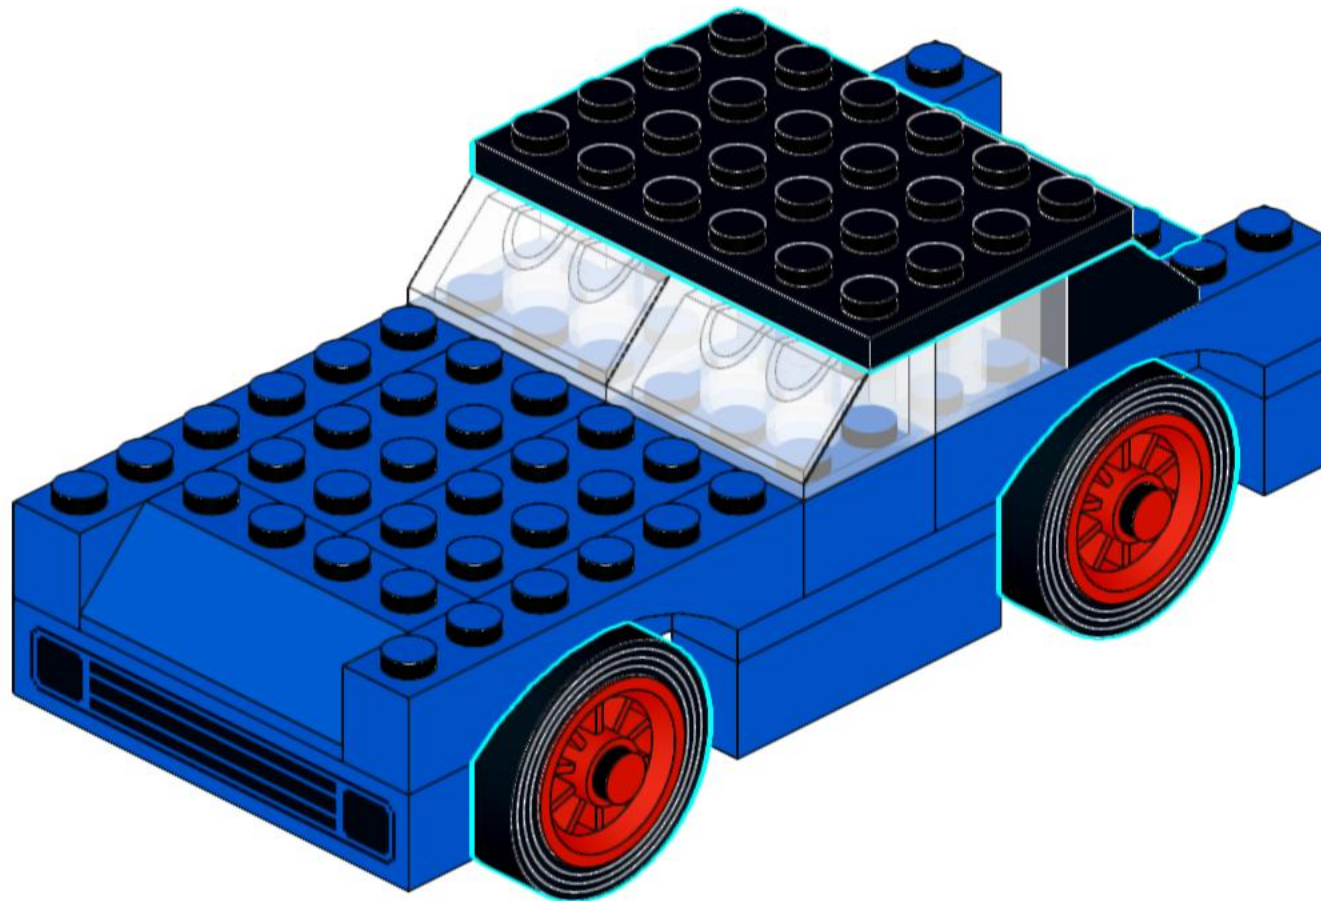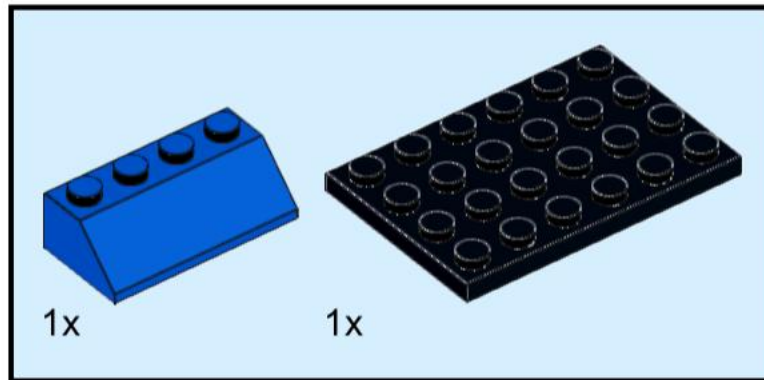

21

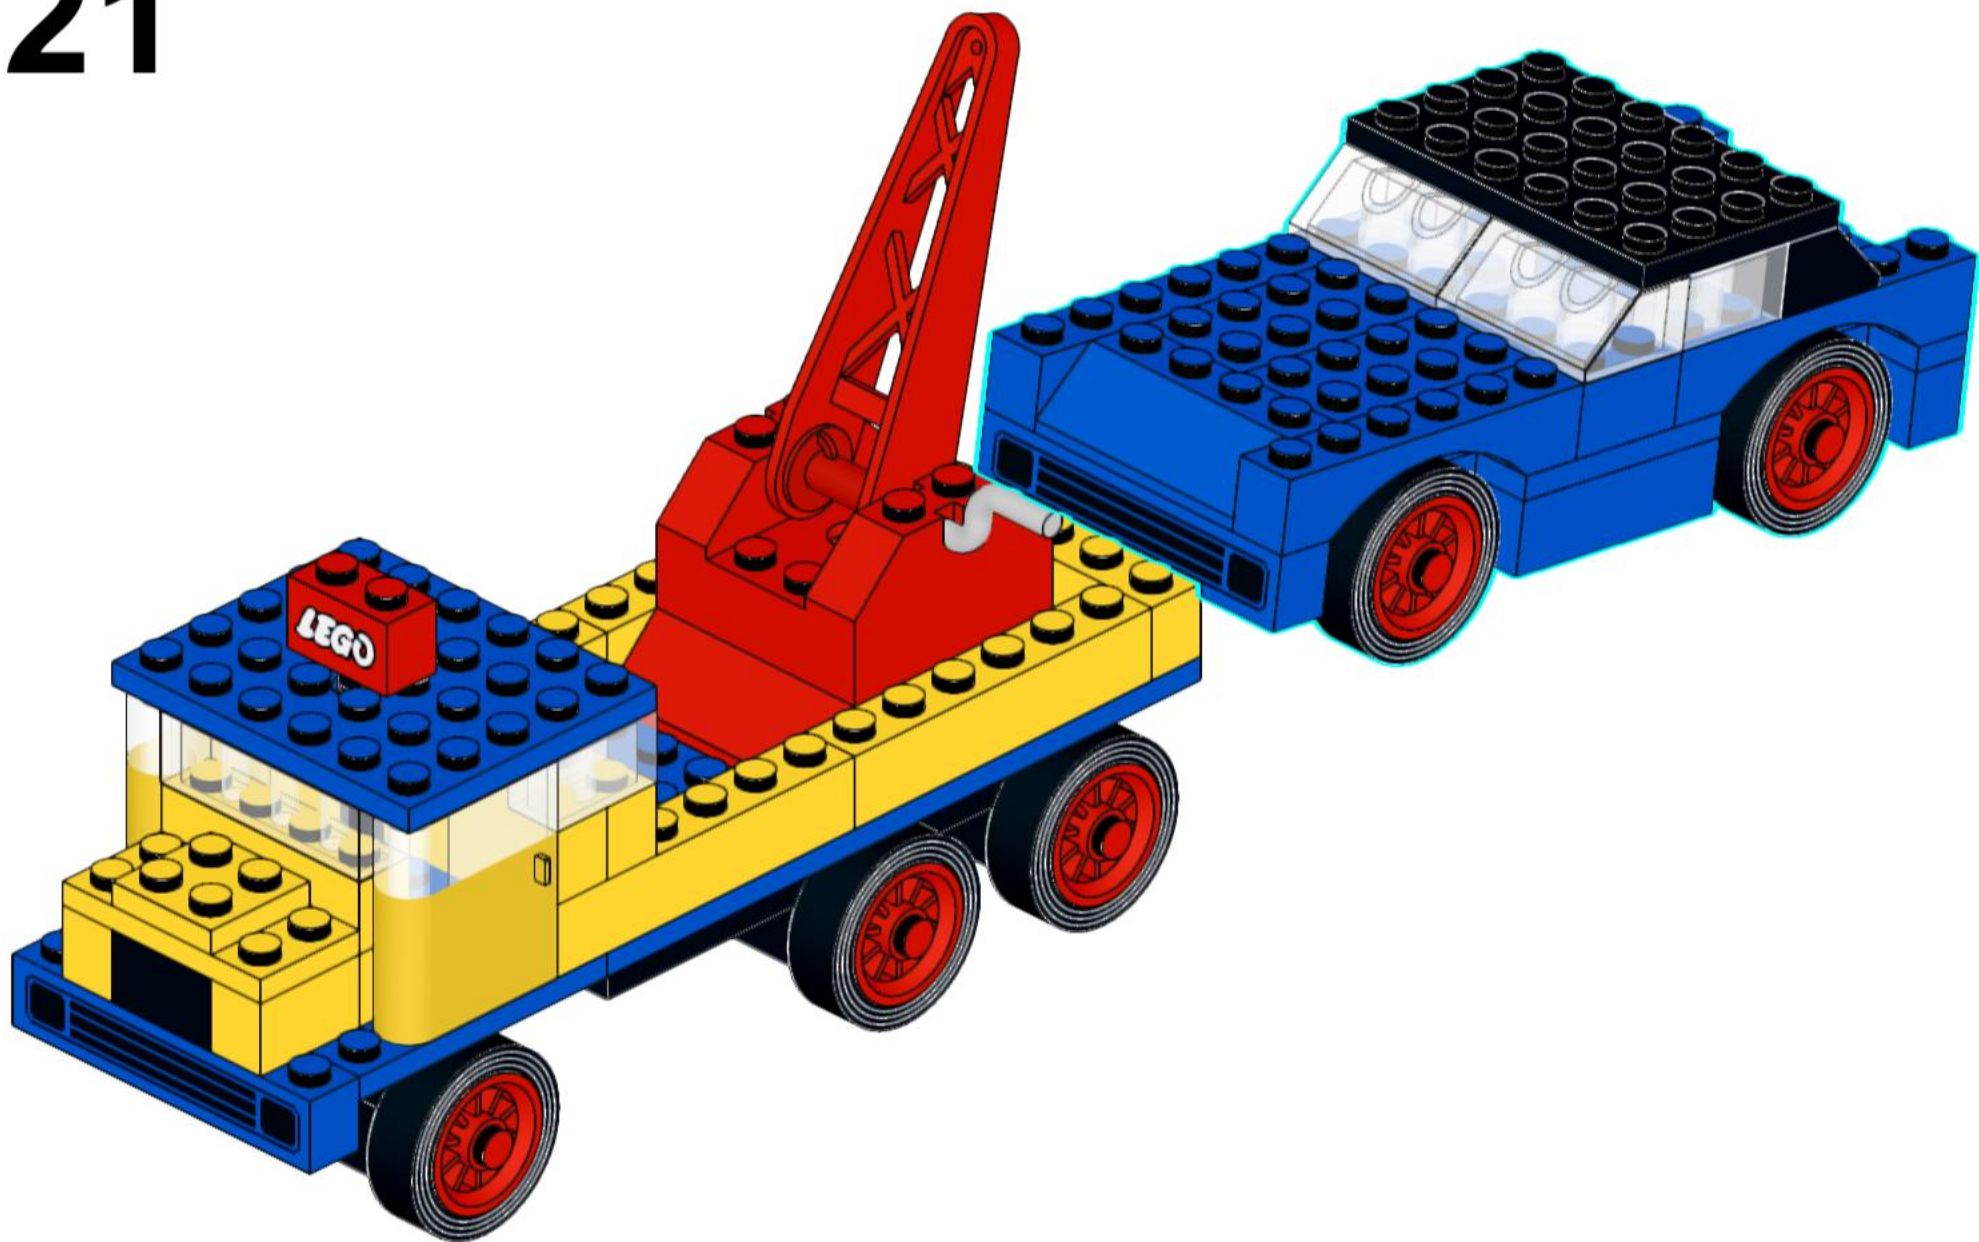


22

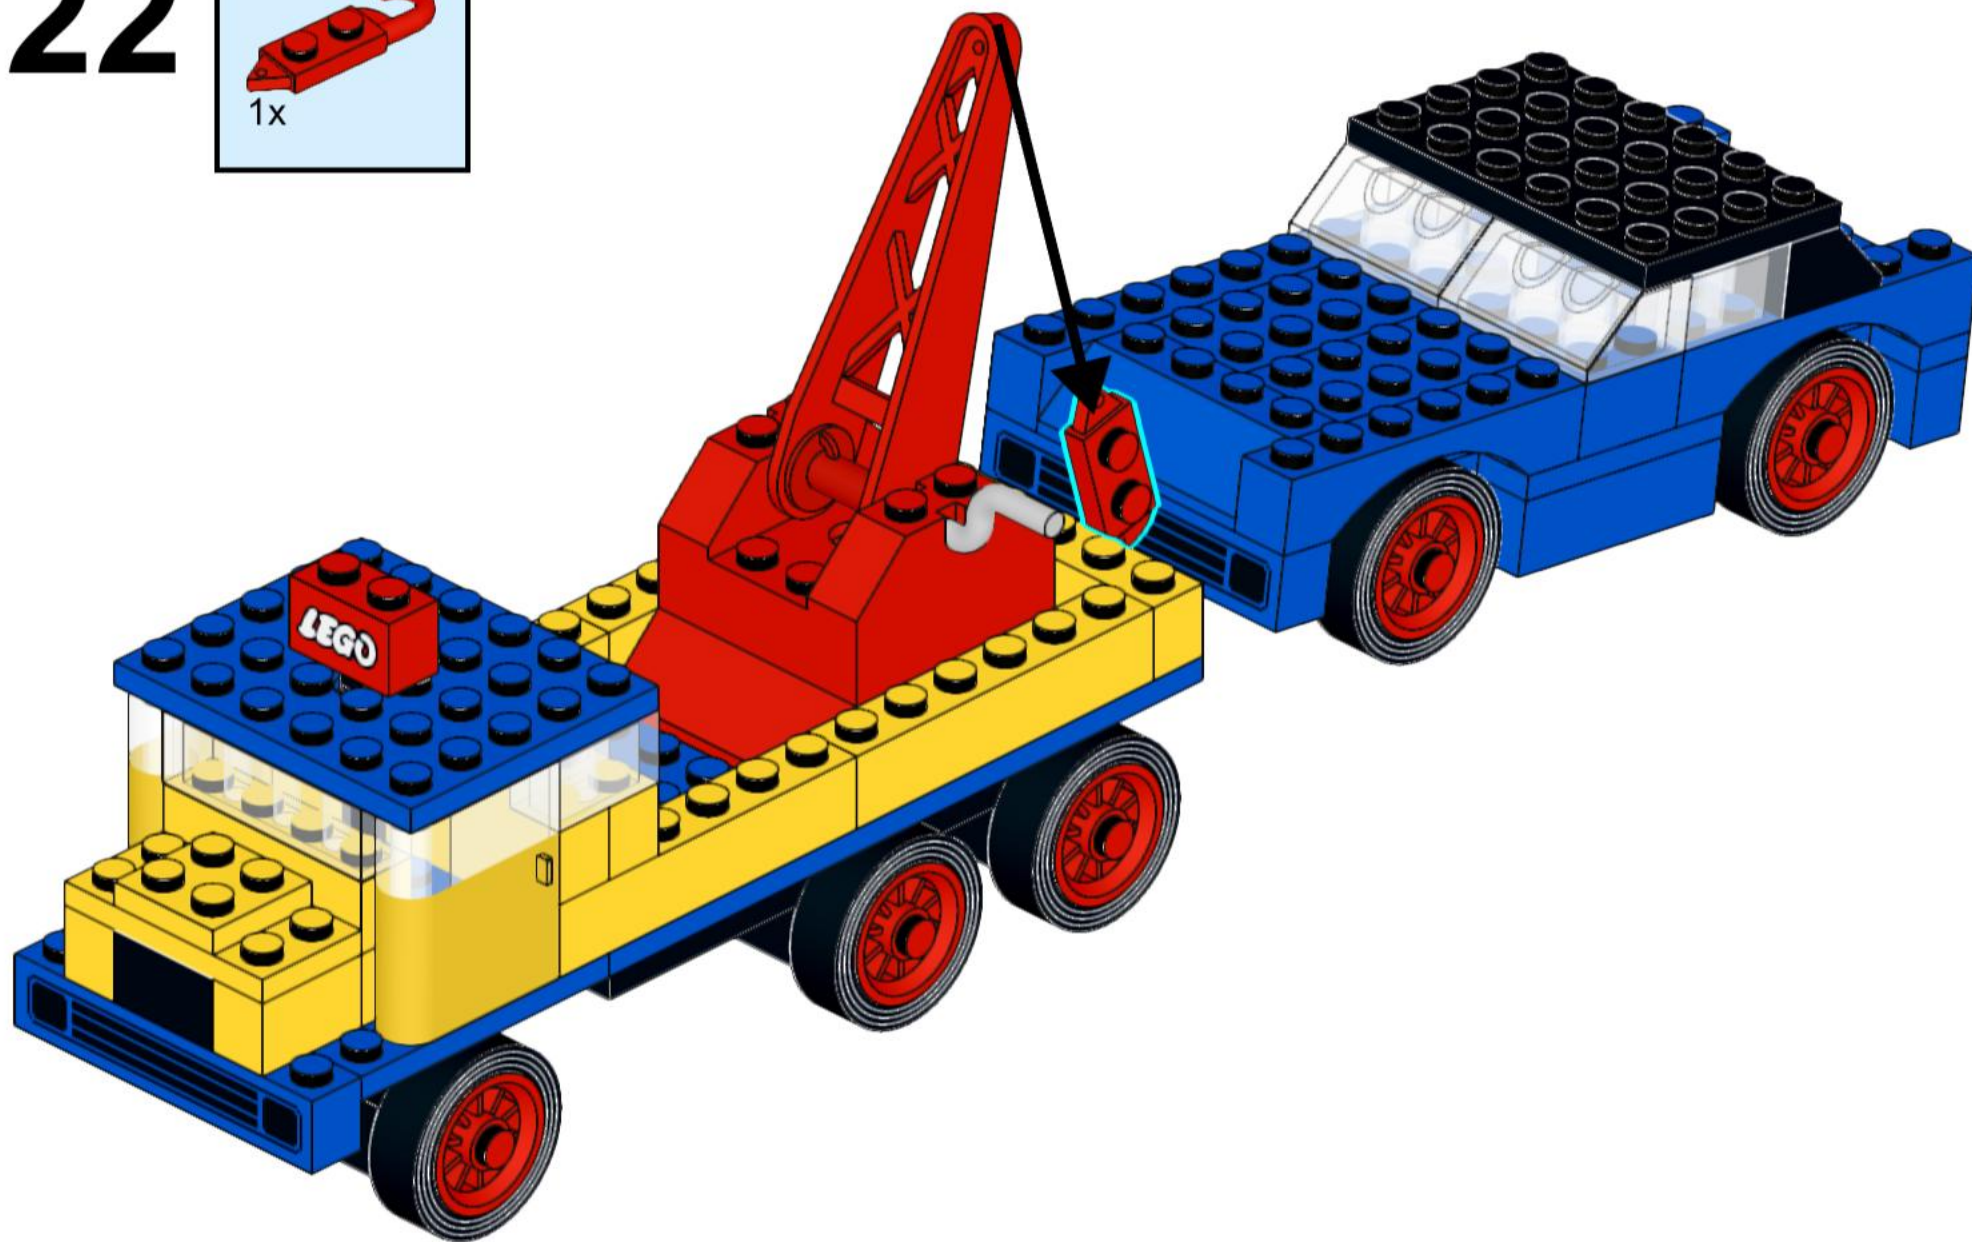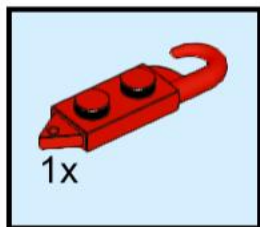




2x
3005
Yellow

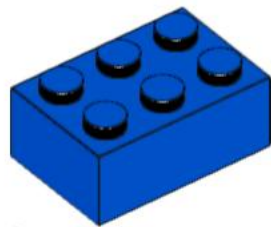


2x
3002
Blue

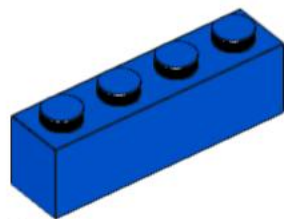


4x
3010
Blue




1x
800
Black

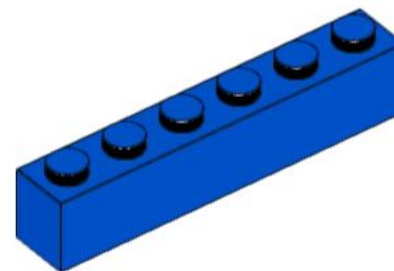


1x
3009
Blue

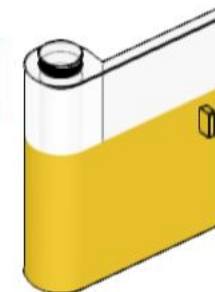

1x
801pb03
Trans-Clear

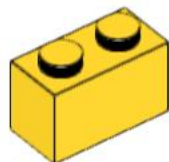

2x
3004
Yellow

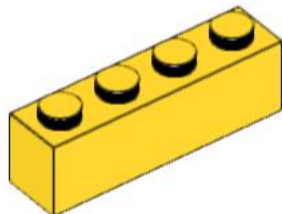

3x
3010
Yellow



4x
7049b
Black




4x
3455
Blue




1x
3004p50
Red




4x
3004
Trans-Clear

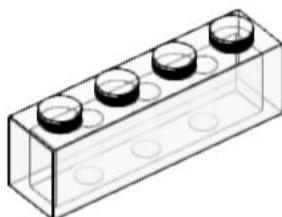

2x
3010
Trans-Clear

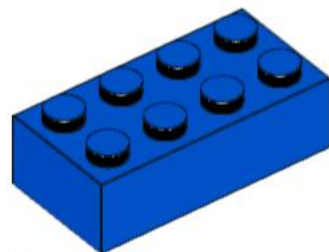

2x
3001
Blue

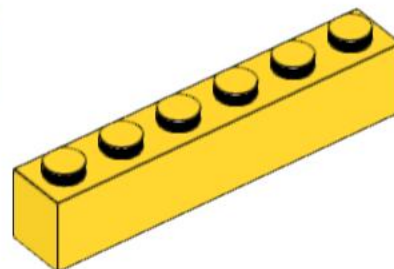


6x
3009
Yellow




2x
3009p01
Blue



1x
802pb03
Trans-Clear

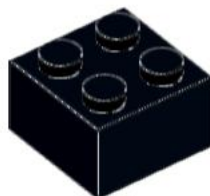


1x
3003
Black

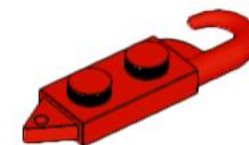


1x
3127b
Red



2x
3022
Black

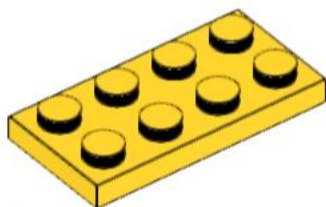

1x
3020
Yellow

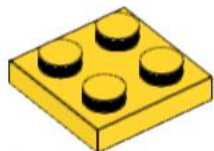


1x
3022
Yellow



1x
3032
Black




2x
3021
Black

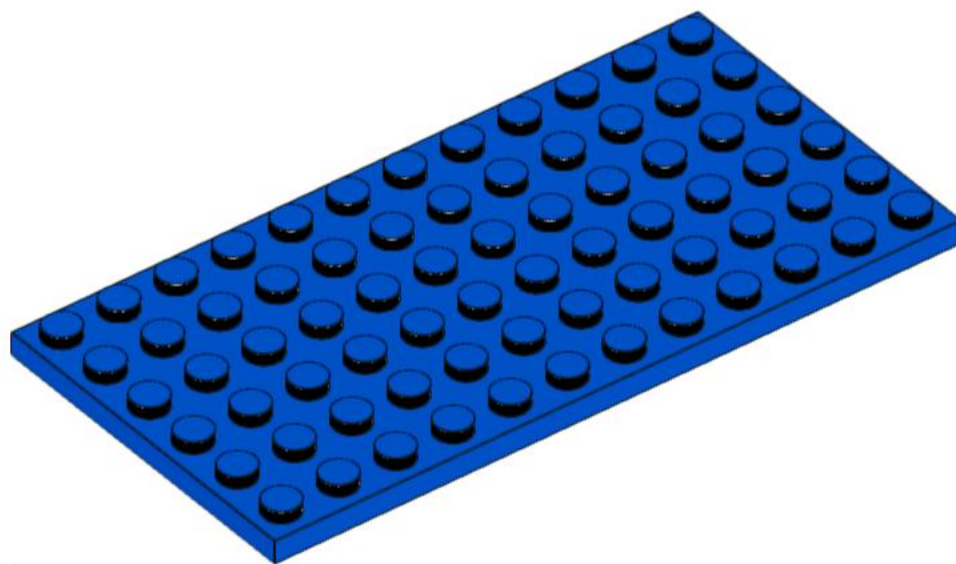

1x
3028
Blue




4x
3020
Black

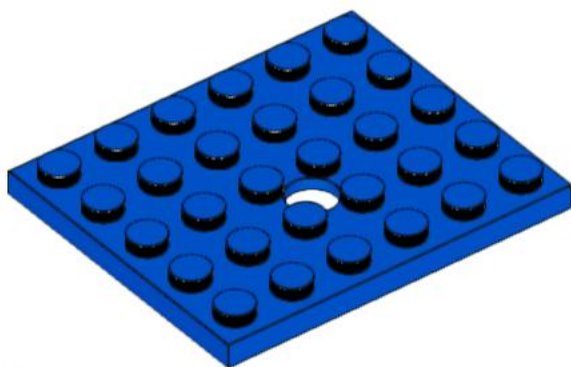


2x
711
Blue




2x
3040a
Black

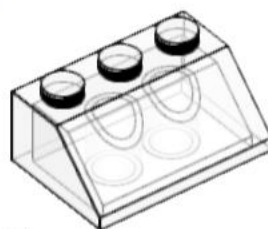


2x
3038
Trans-Clear

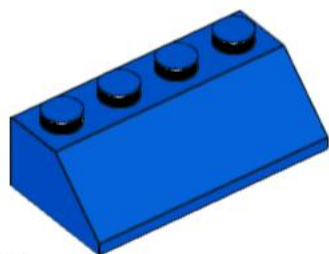


2x
3037
Blue

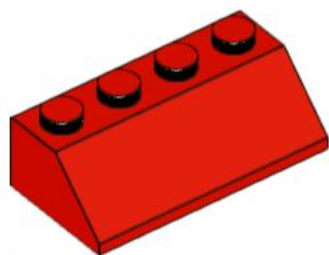

2x
3037
Red

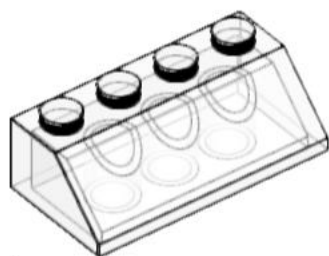


1x
3037
Trans-Clear

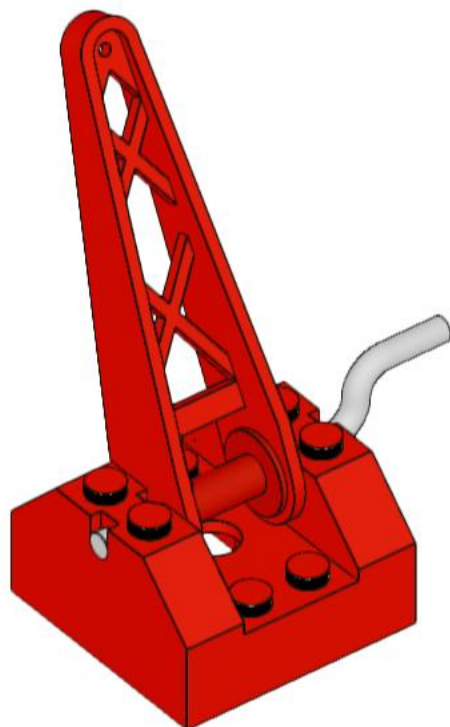

1x
bb0073
Red



1x
799
Black

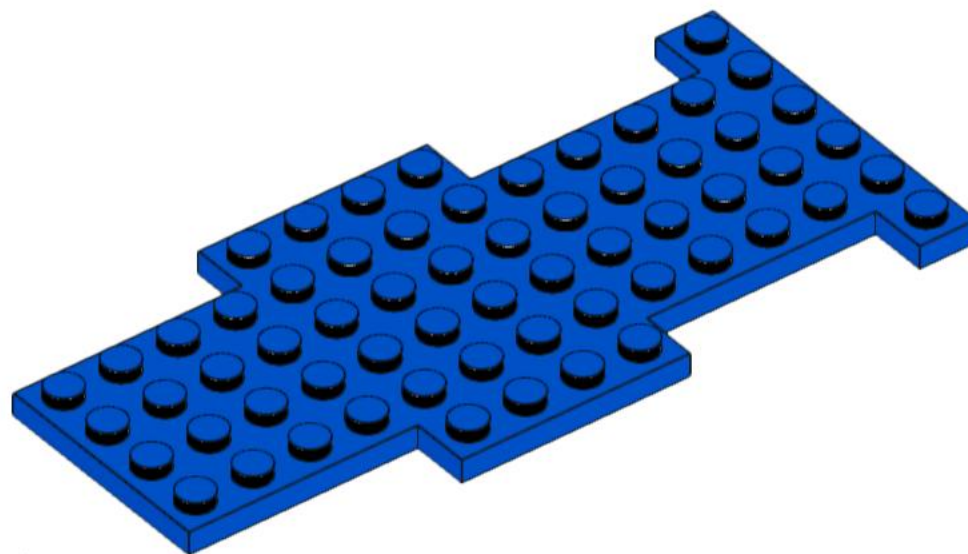

1x
bb0050
Blue



1x
805
Black



10x
bb0019
Red



10x
132old
Black