




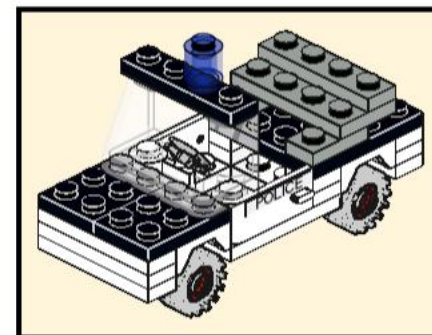



621-1

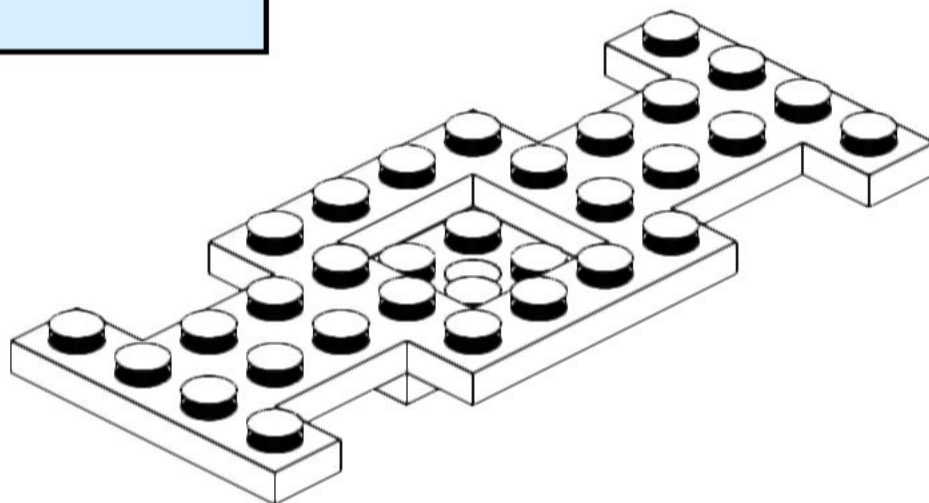



1

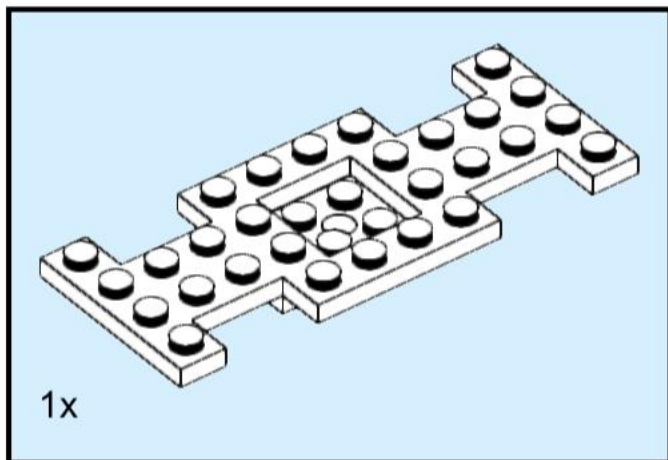



2

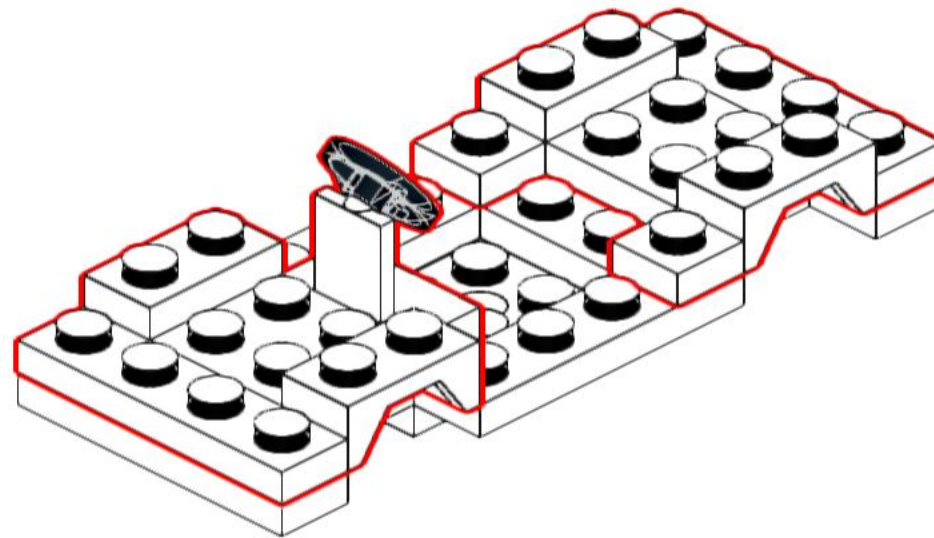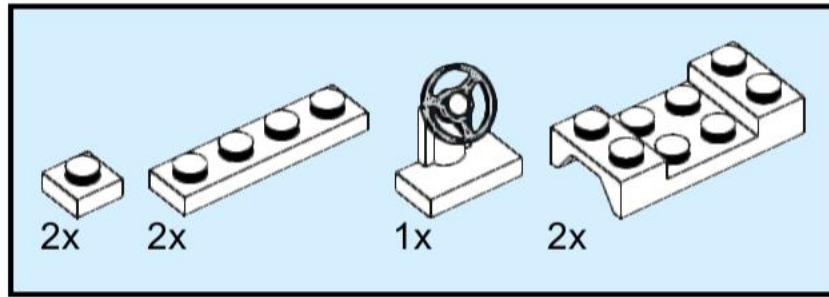



3

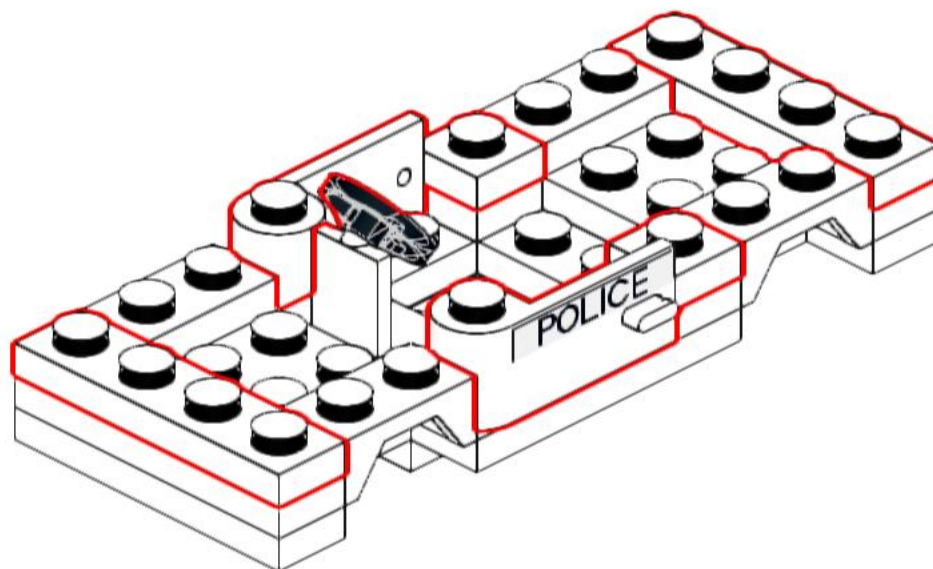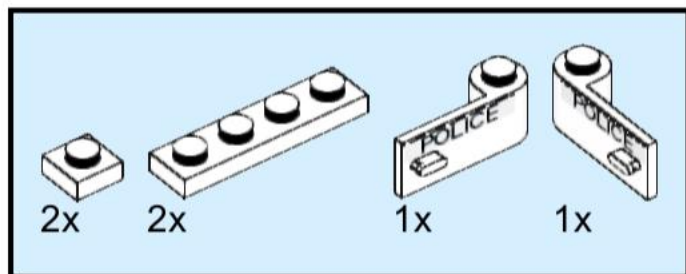



4

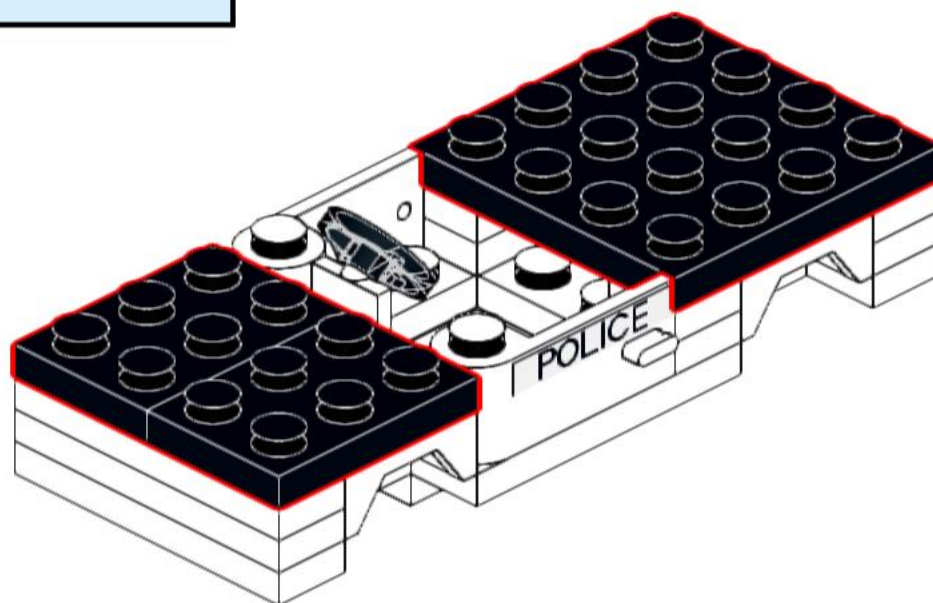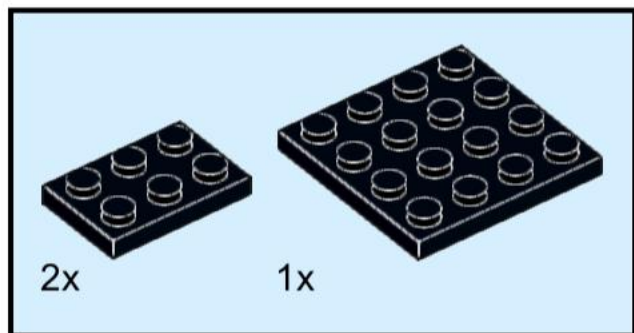



5

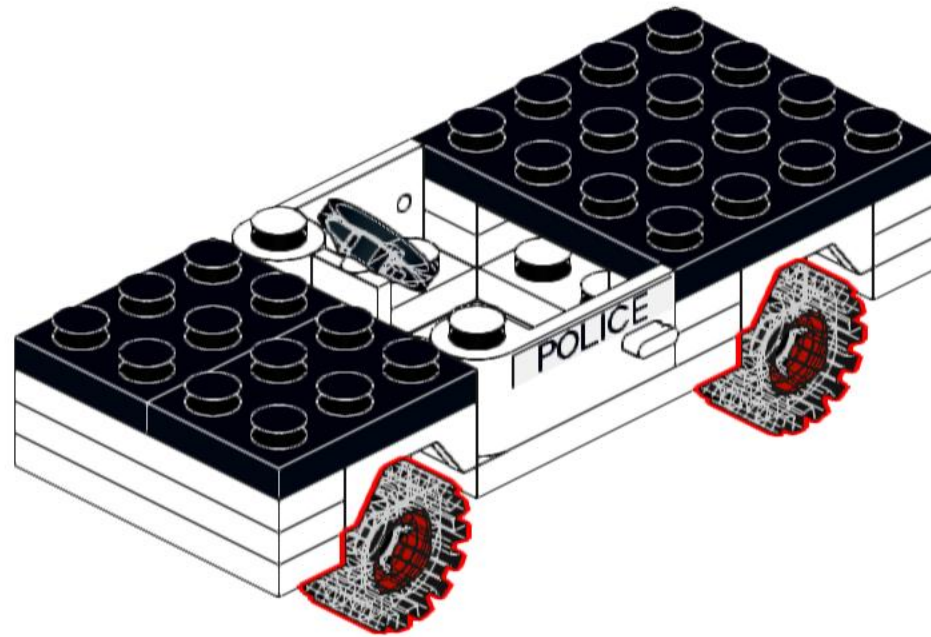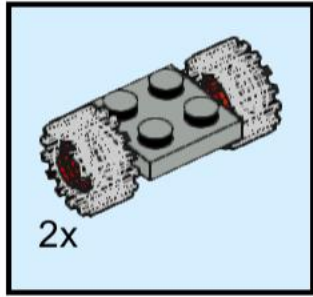



6

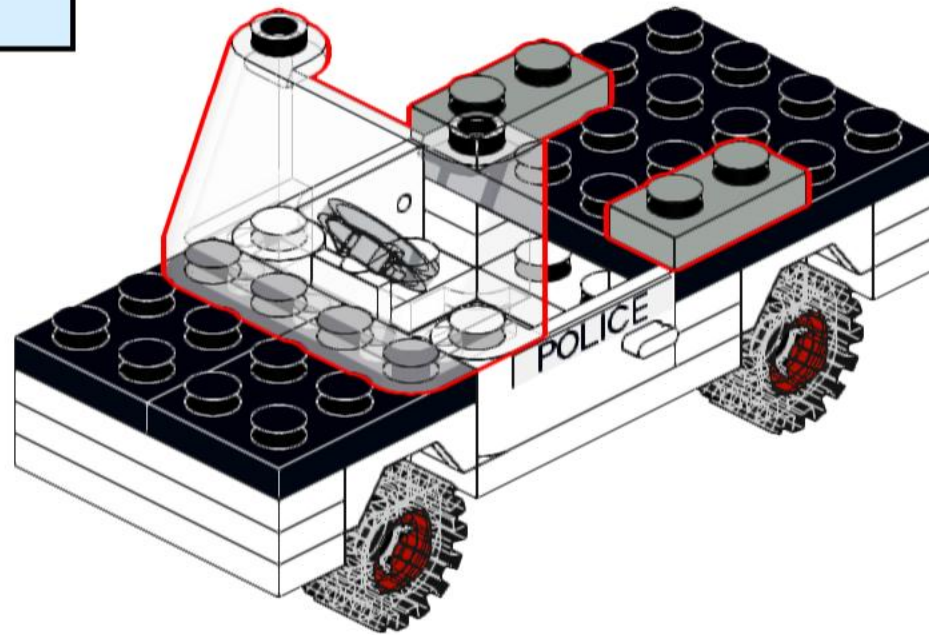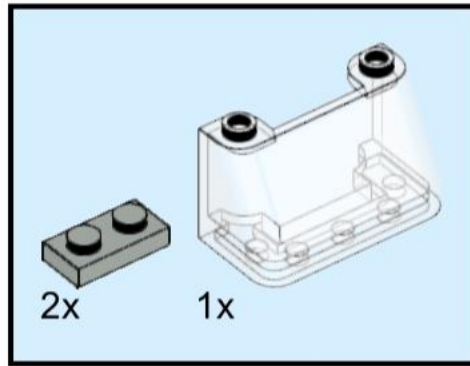



7

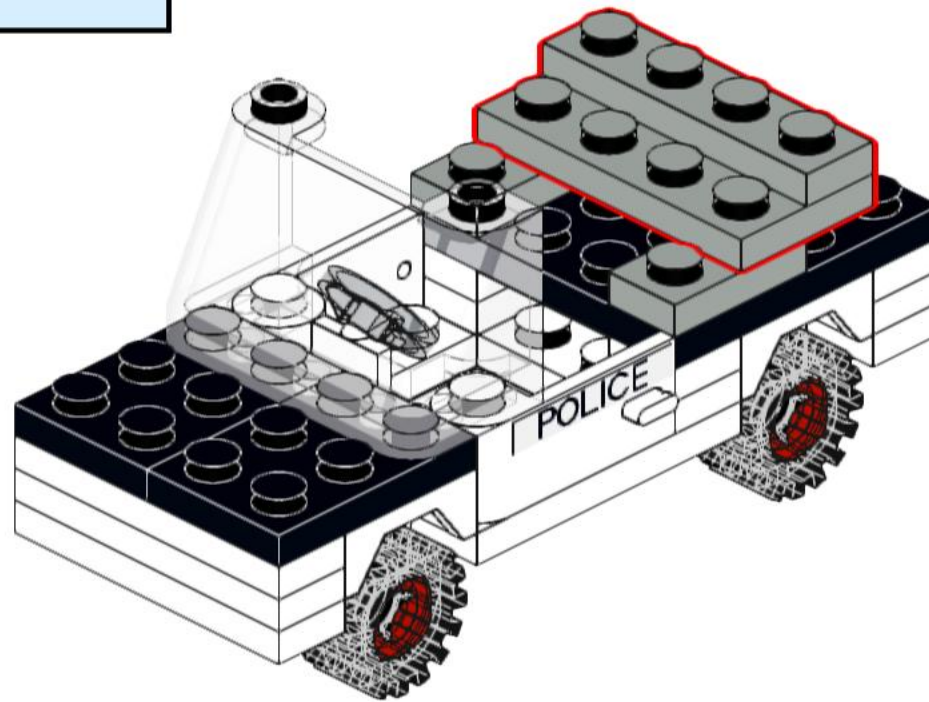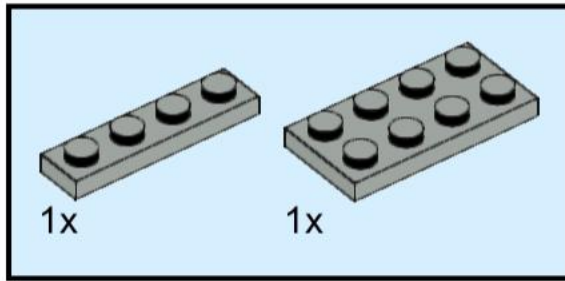


8

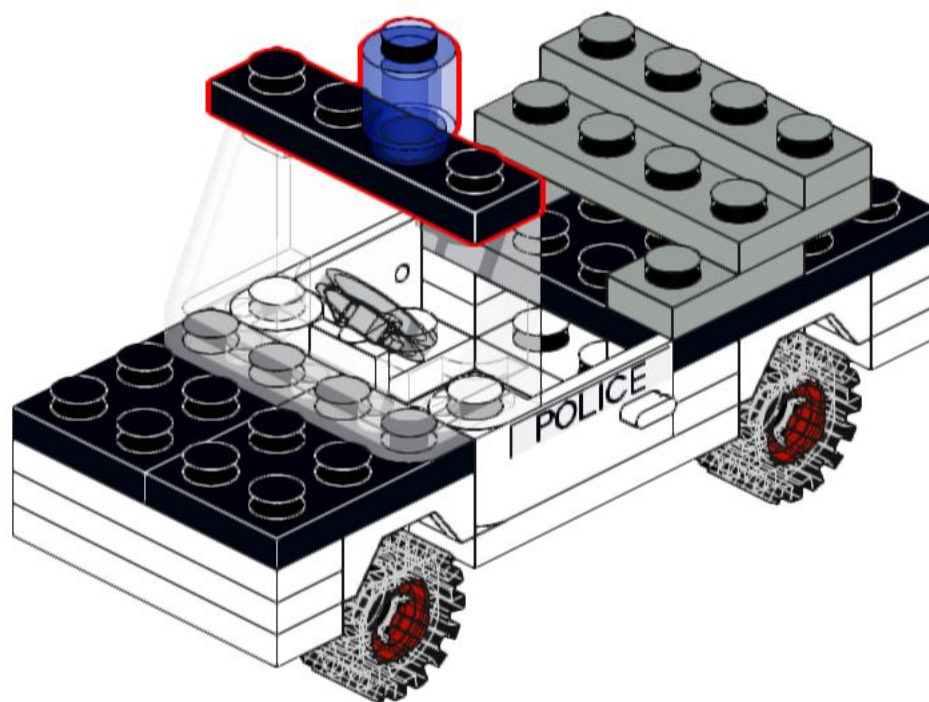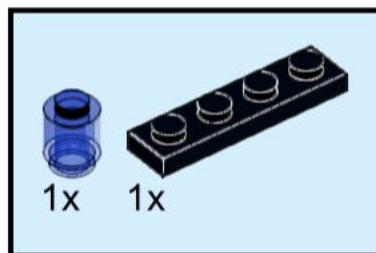

9

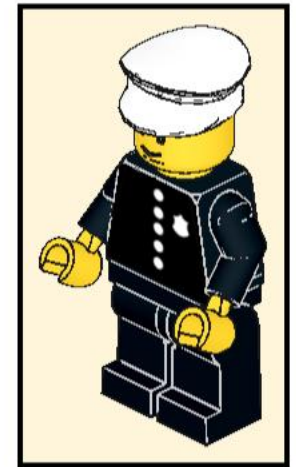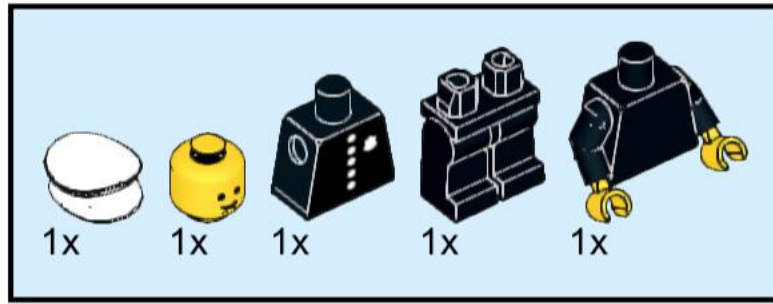

10

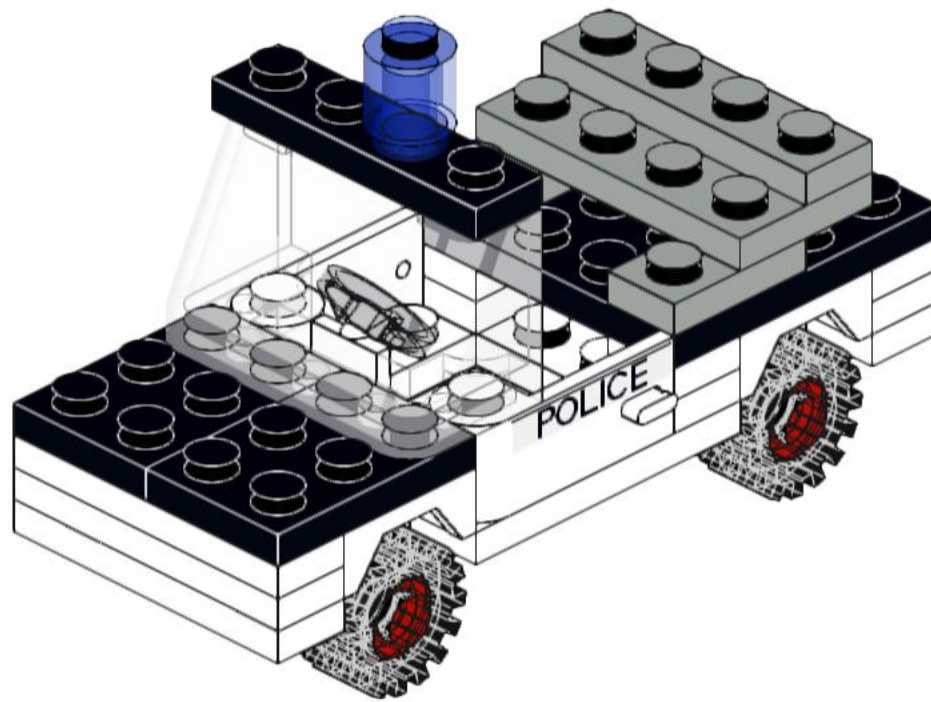




1x
3062a
Trans-Dark Blue




1x
970c00
Black



2x
3021
Black

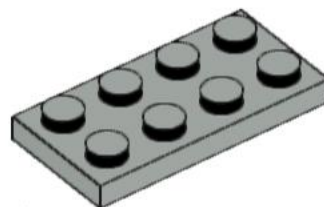


1x
3020
Light Gray

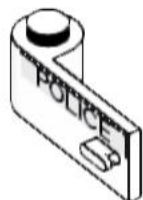

1x
3822pb025
White



1x
973c018
Black

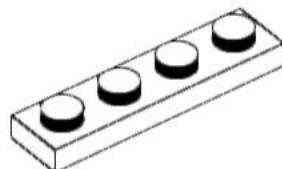


4x
3710
White




1x
3031
Black




1x
3821pb025
White



4x
3024
White

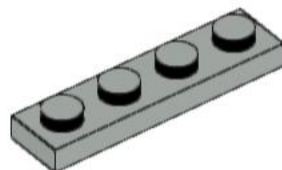


1x
3710
Light Gray

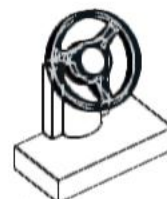

1x
3829c01
White



1x
3626ap01
Yellow




2x
3023
Light Gray




1x
3710
Black




1x
3624
White

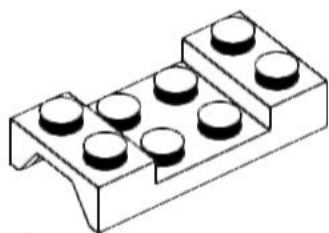

2x
3788
White

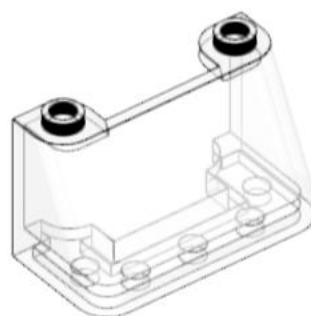


1x
3823
Trans-Clear

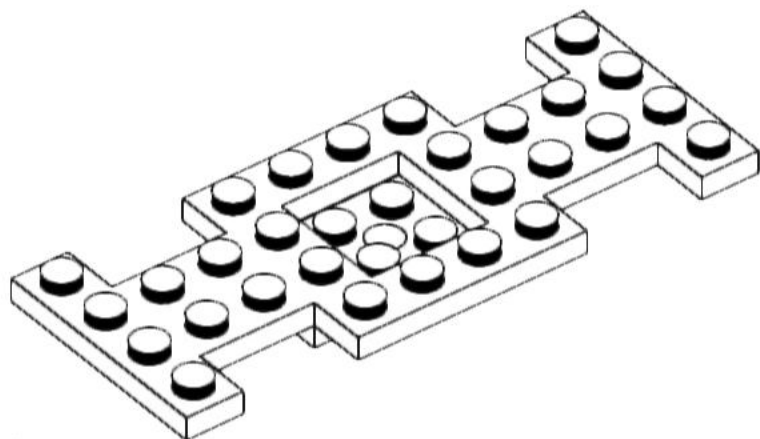

1x
4212a
White



1x

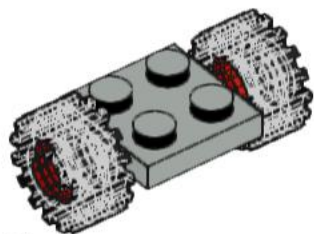

2x
122c01assy2
Light Gray

