




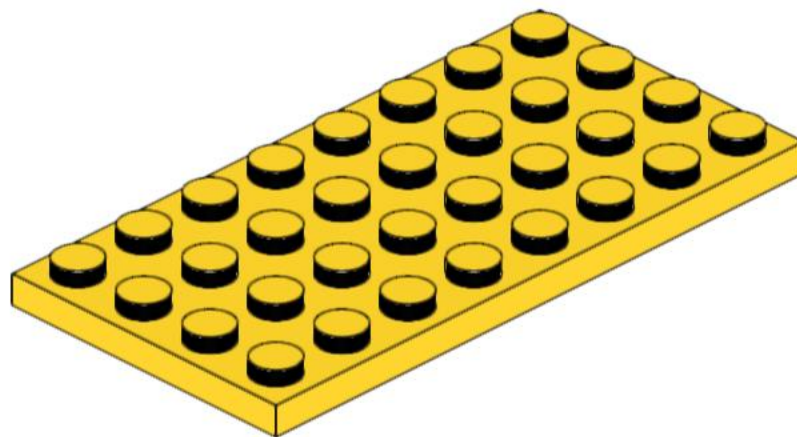



652-2

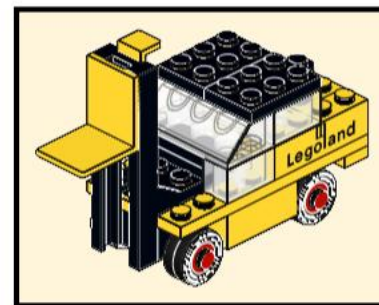



1

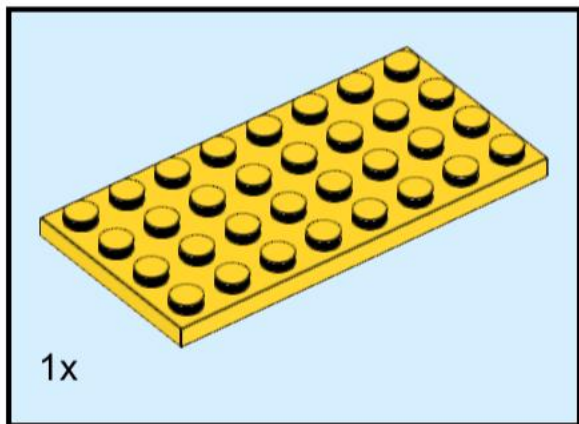



2

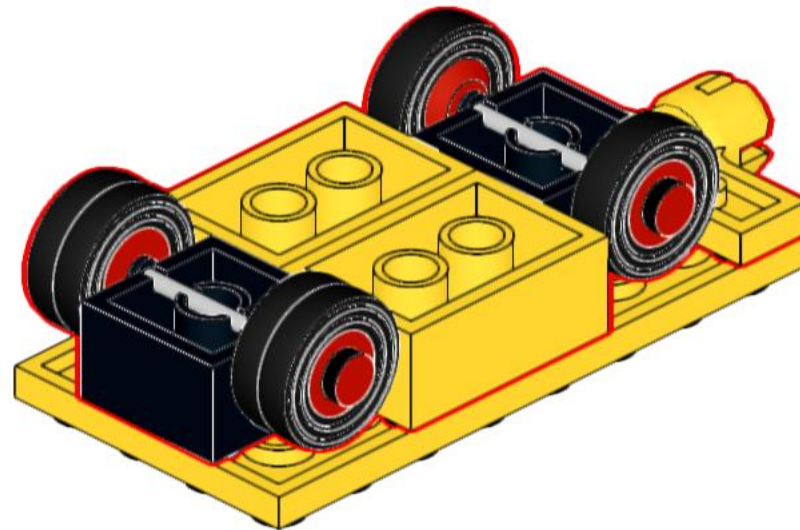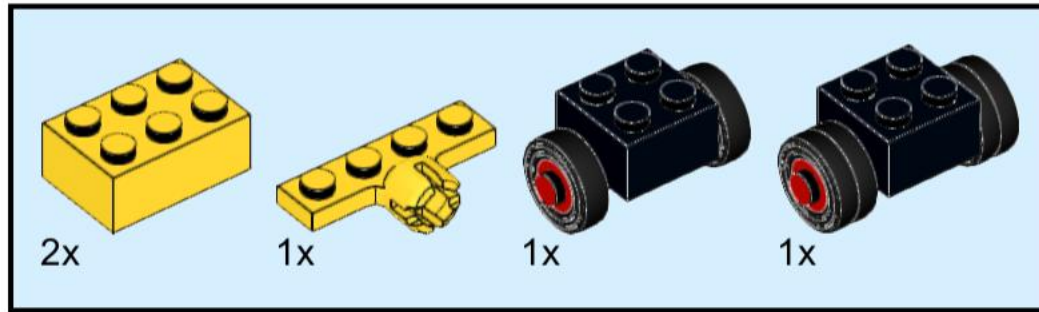



3

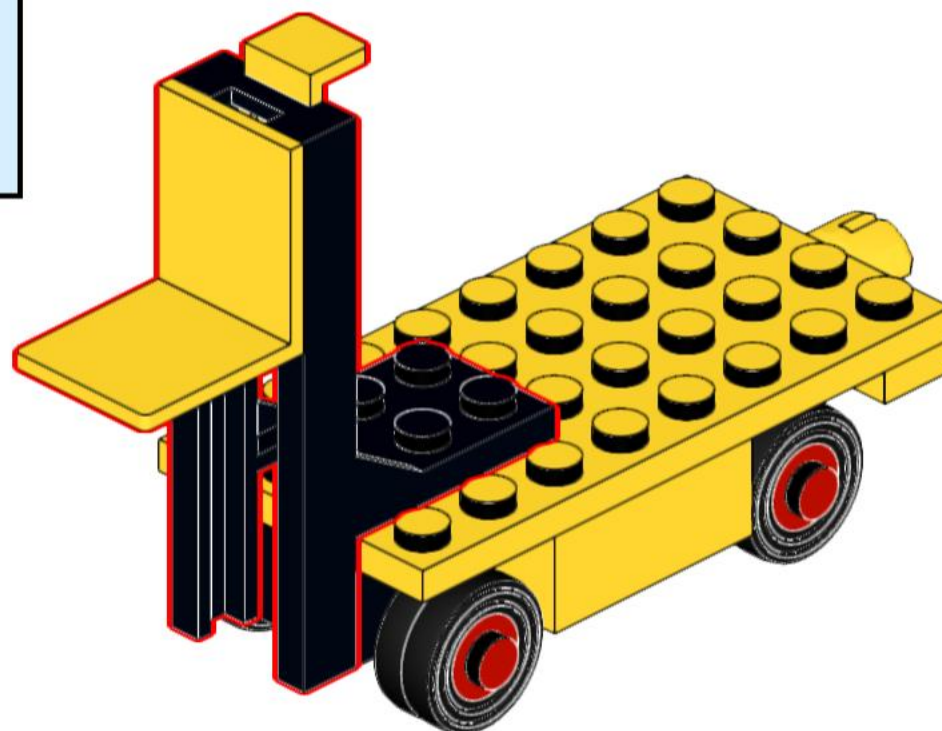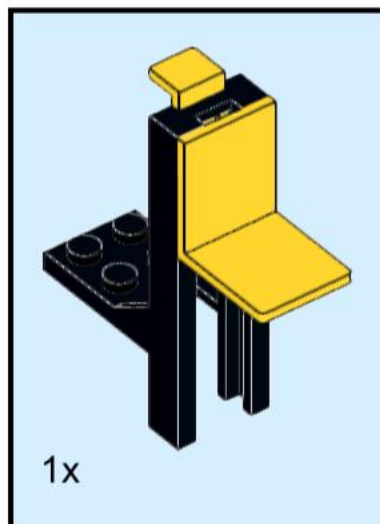



4

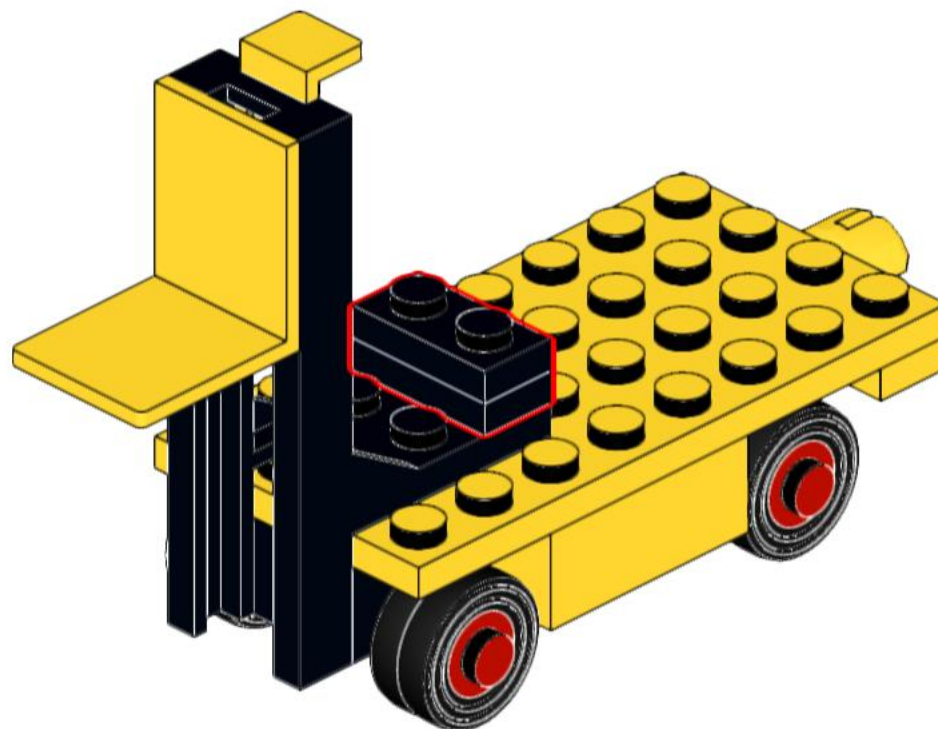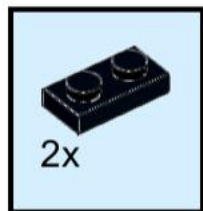



5

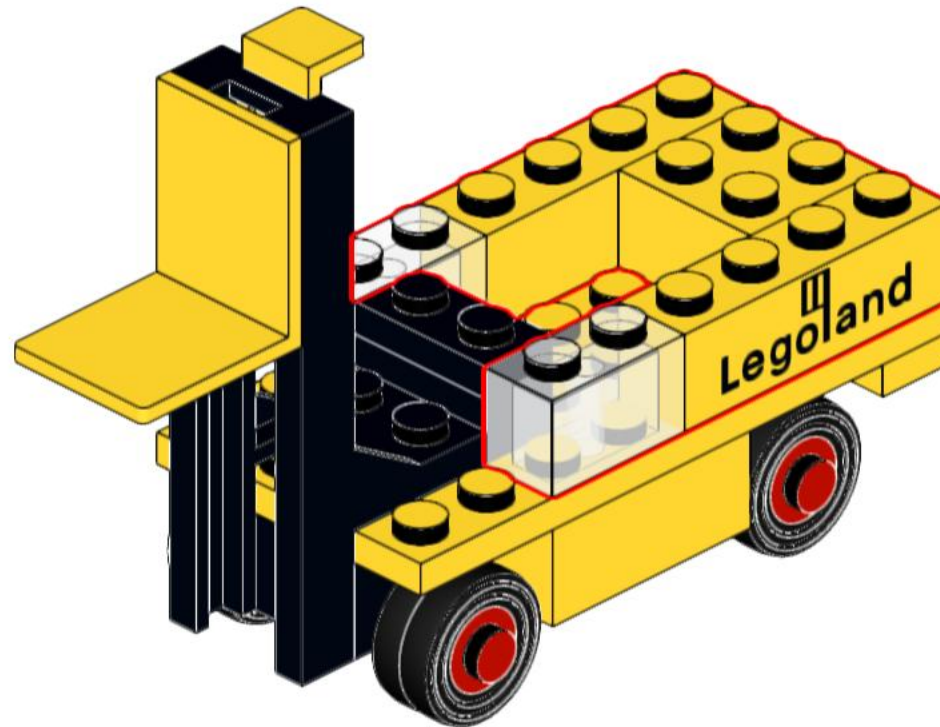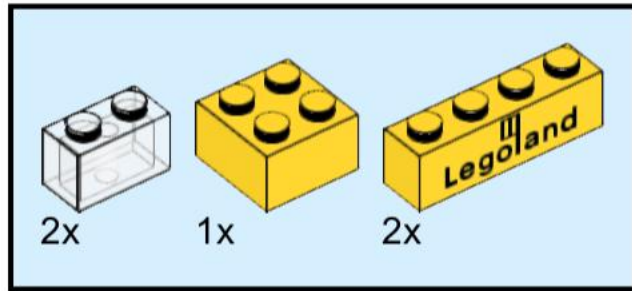


6

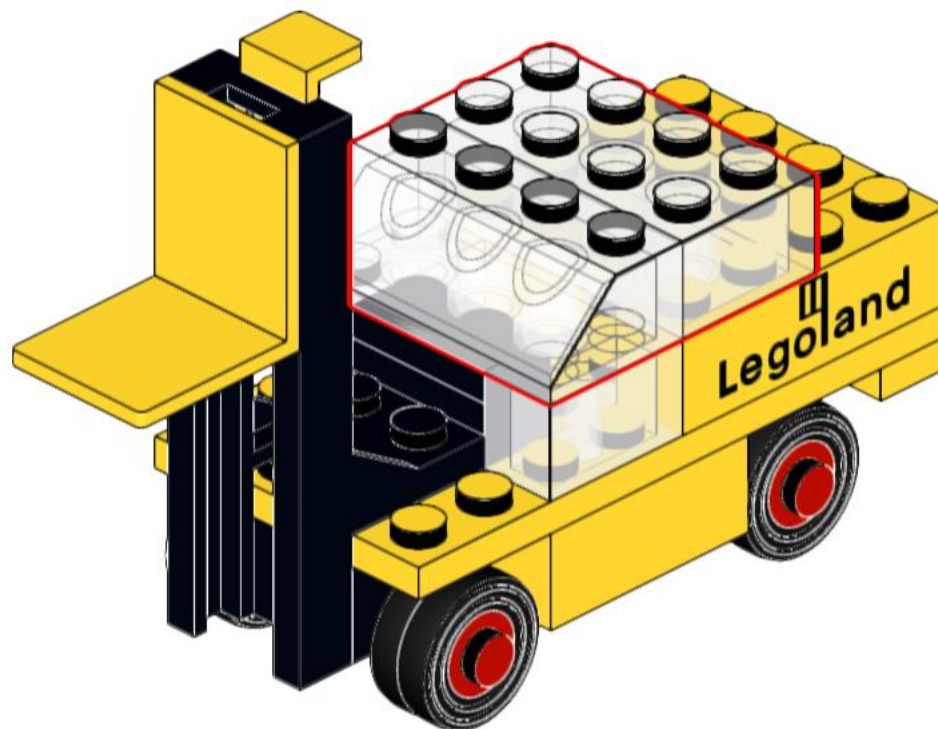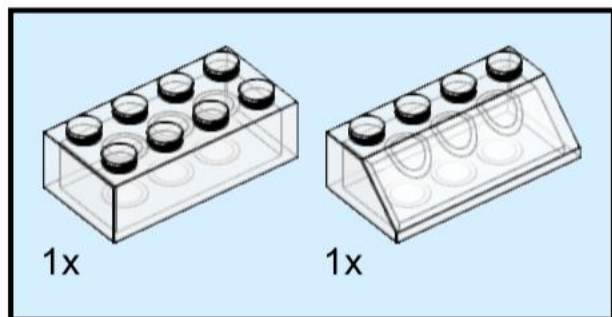




7

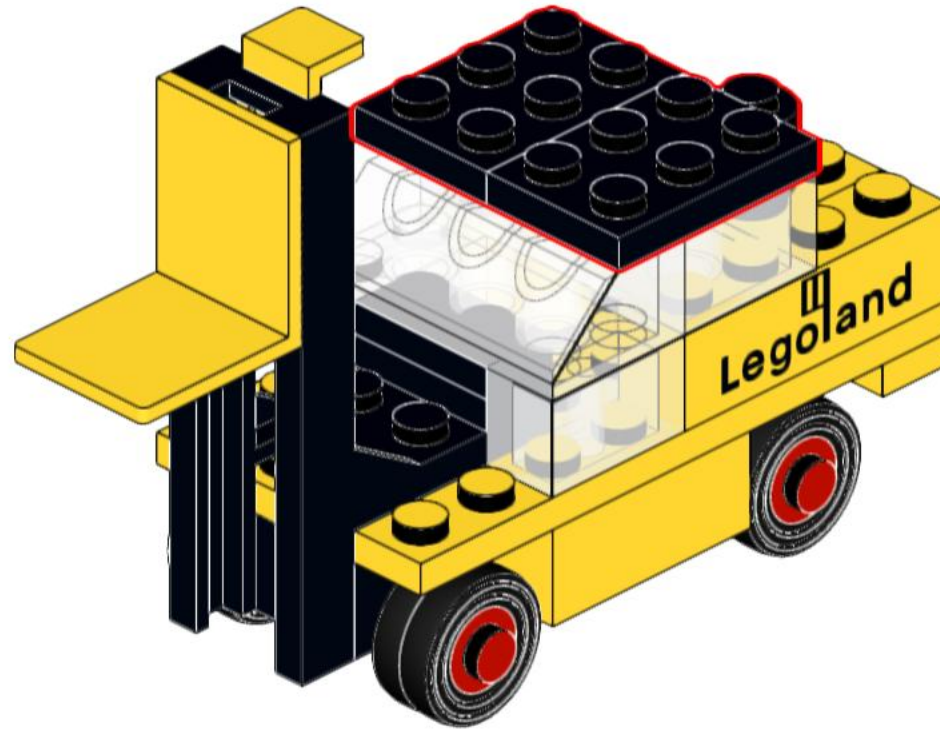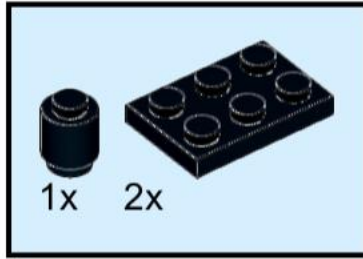



8

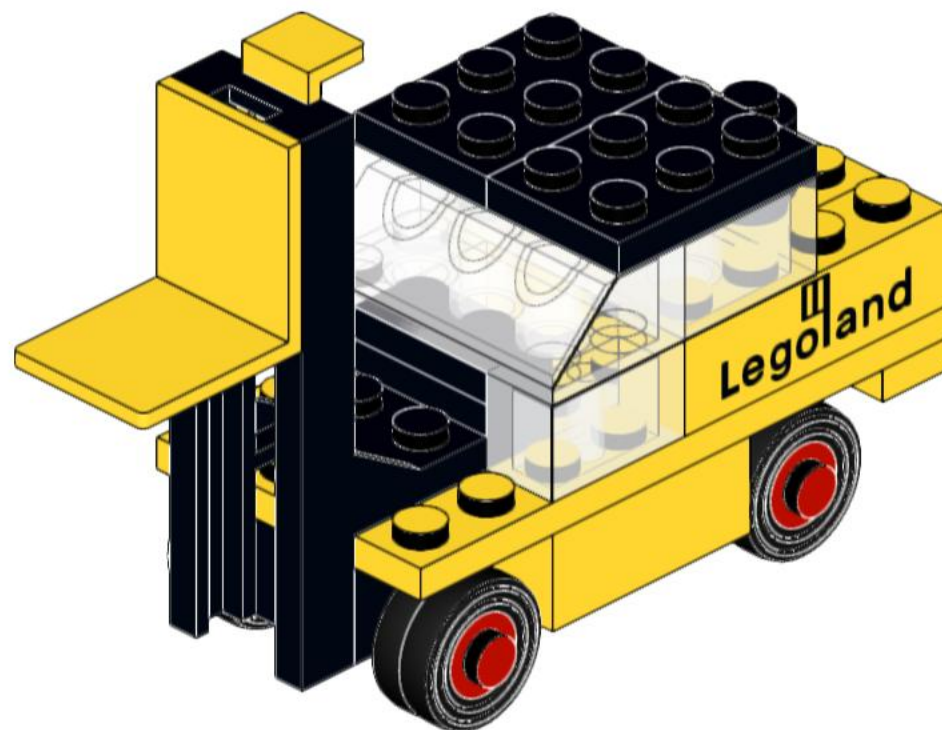



9

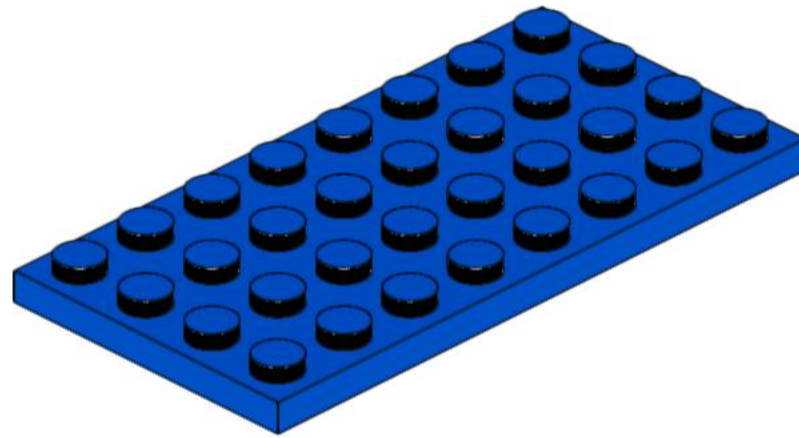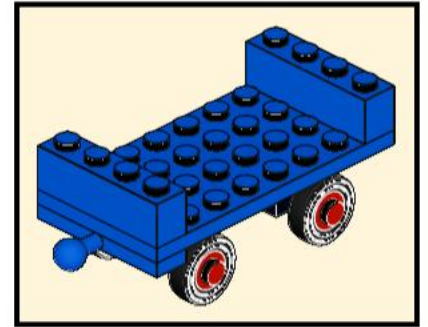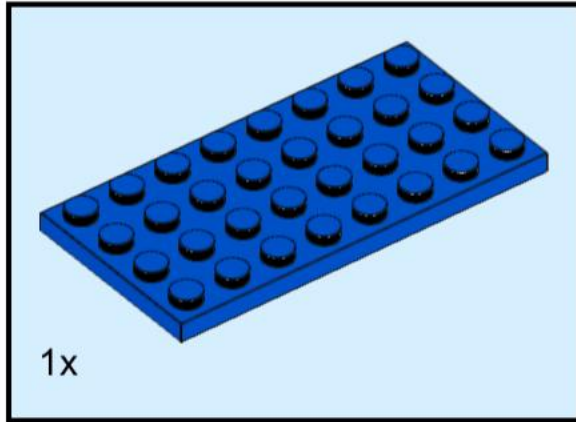


10

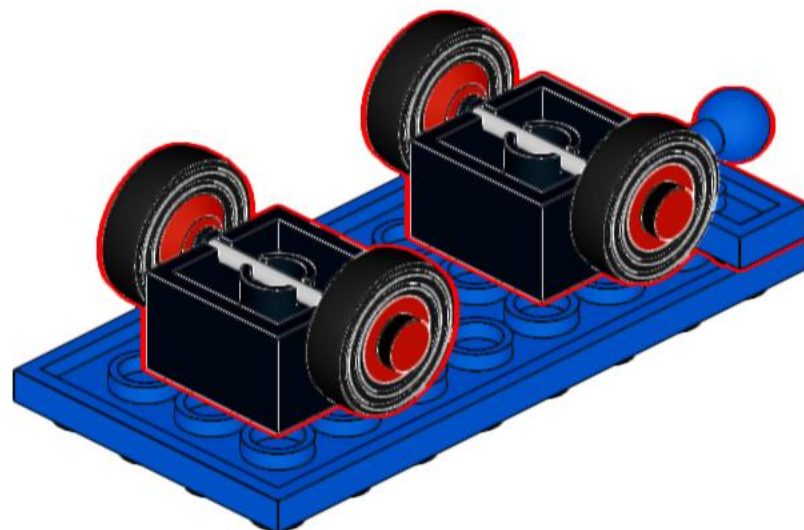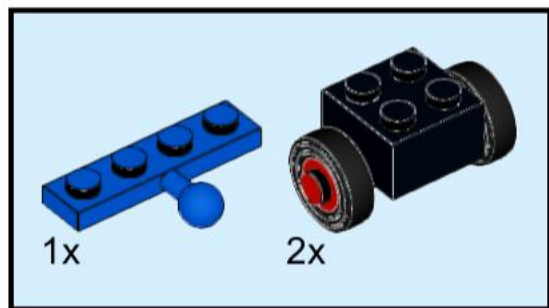




11

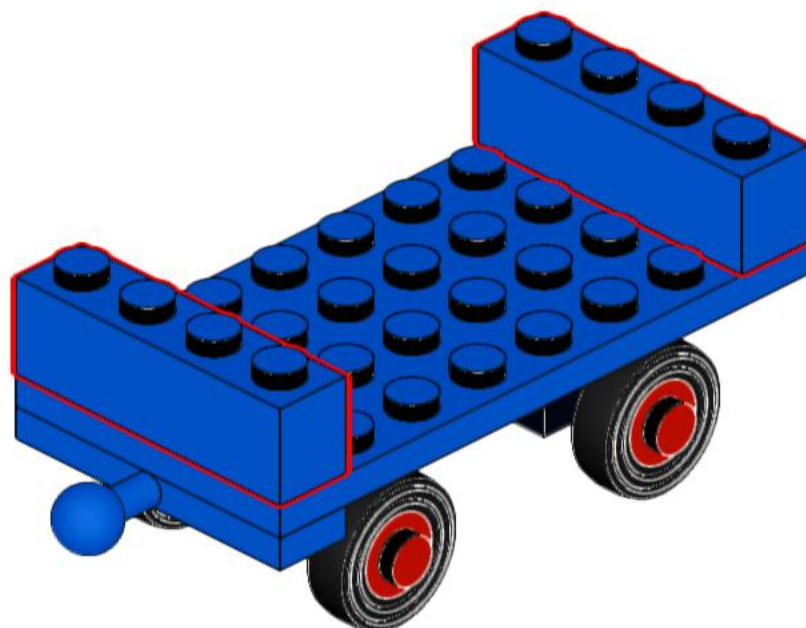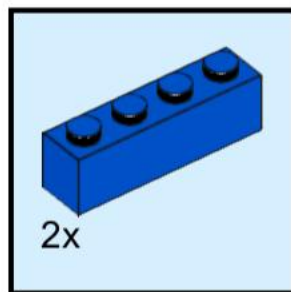


12

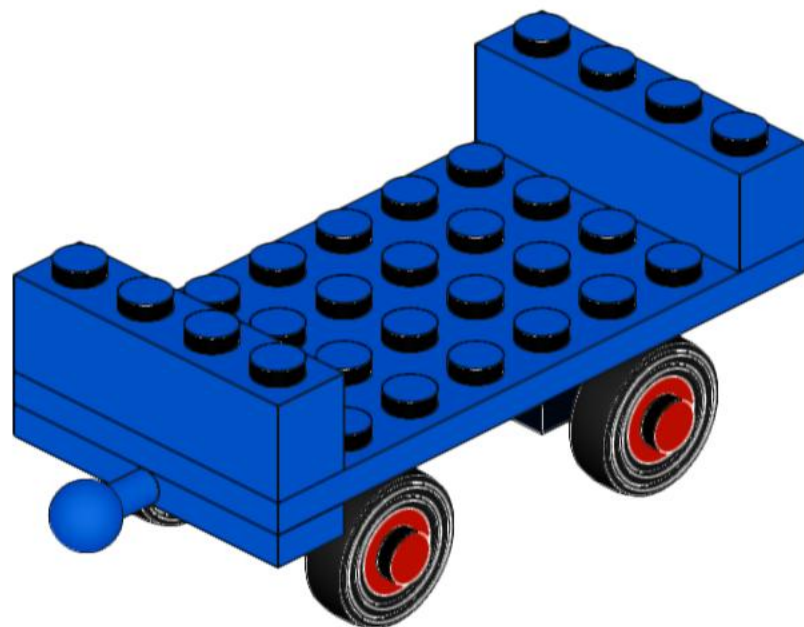

13

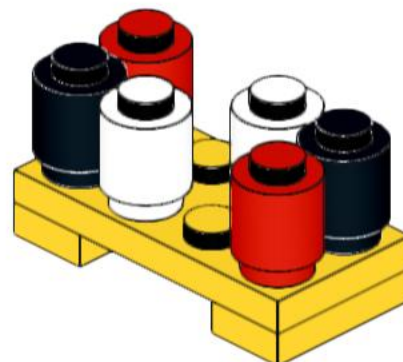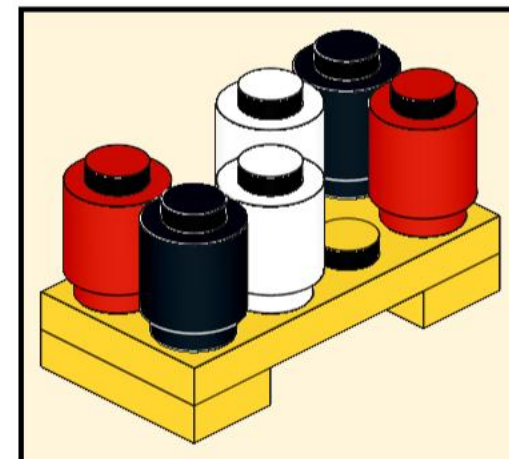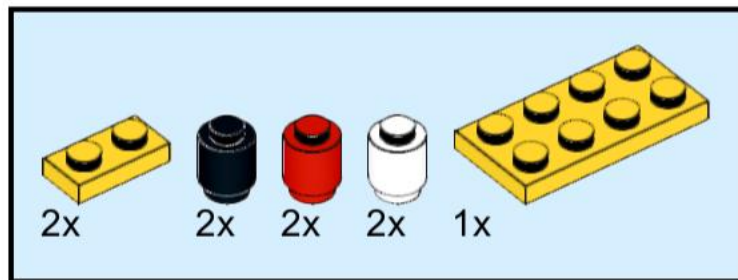

14

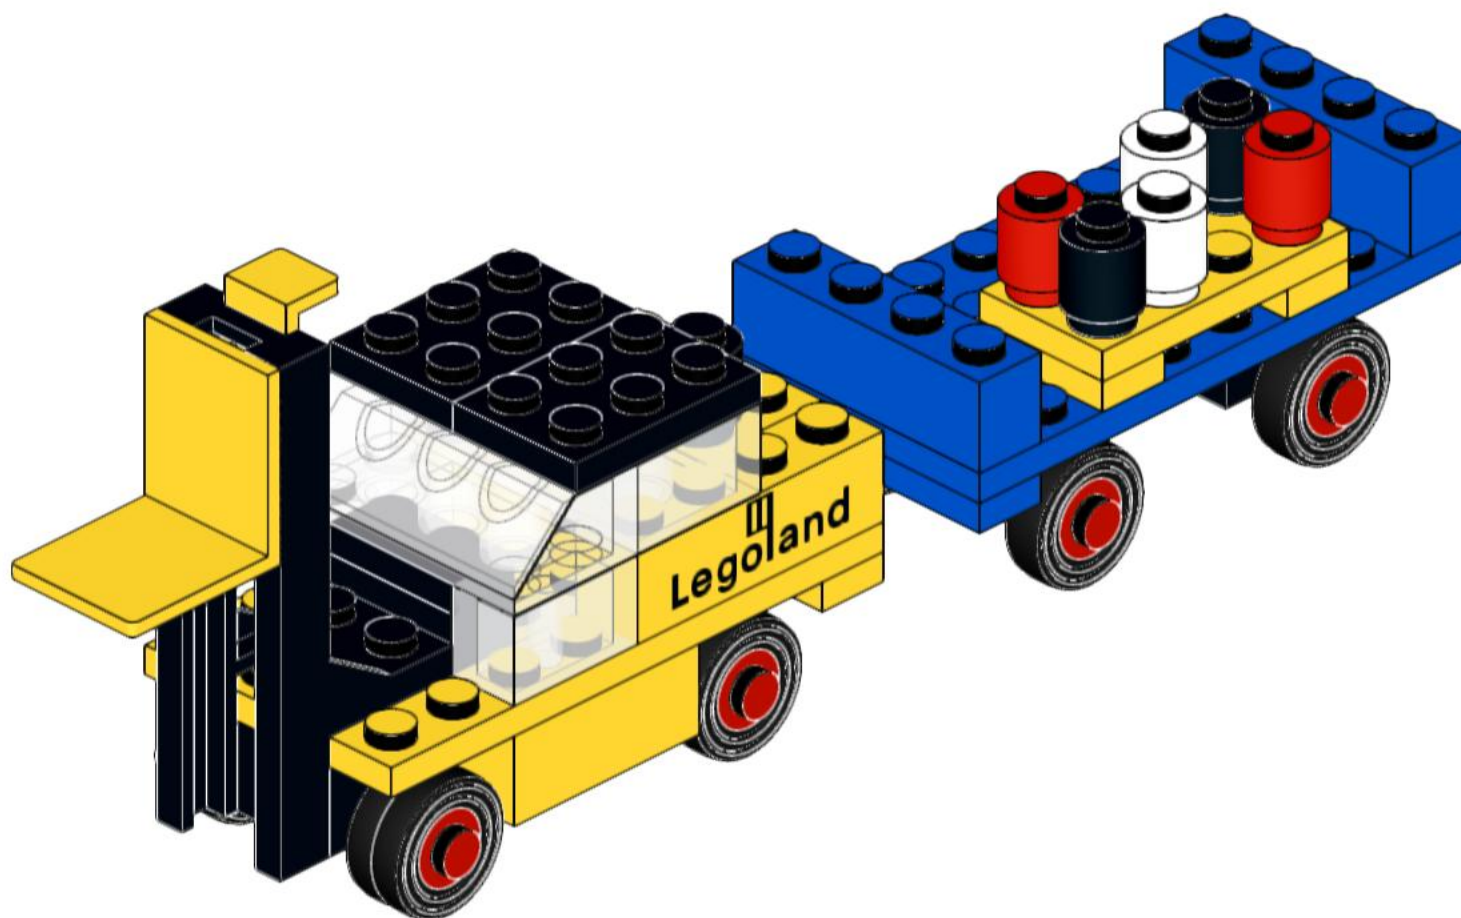



2x
3062a
White




2x
3062a
Red




3x
3062a
Black




2x
3004
Trans-Clear

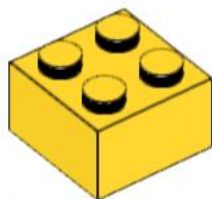

1x
3003
Yellow

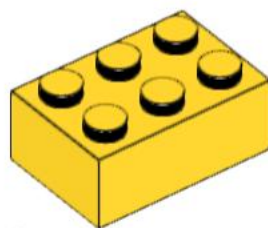

2x
3002
Yellow

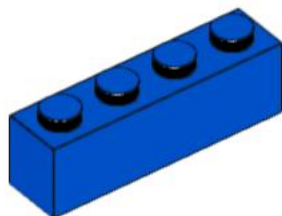


2x
3010
Blue



1x
3001
Trans-Clear



2x
3010p30
Yellow




2x
3023
Yellow




2x
3023
Black



2x
3021
Black

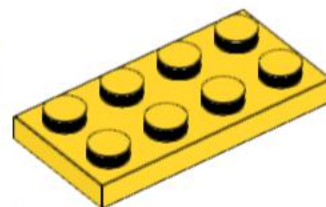


1x
3020
Yellow

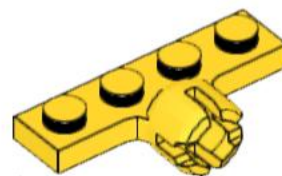


1x
3183b
Yellow




1x
3184
Blue

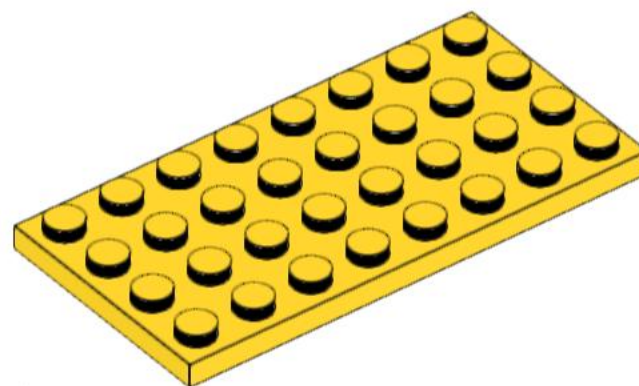

1x
3035
Yellow

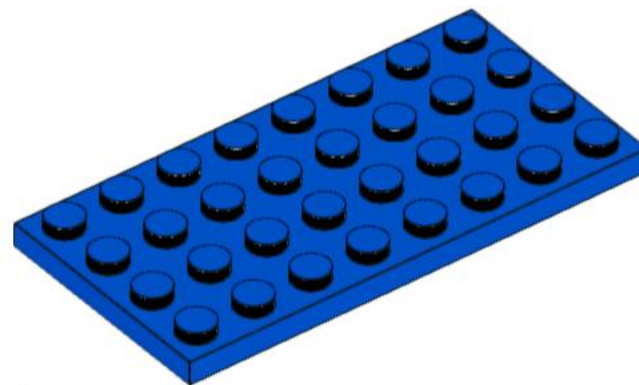


1x
3035
Blue

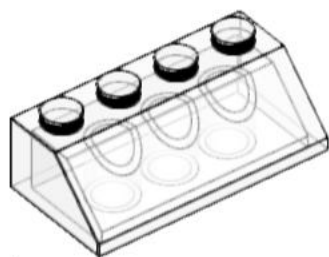


1x
3037
Trans-Clear



3x
3137c01assy1
Black

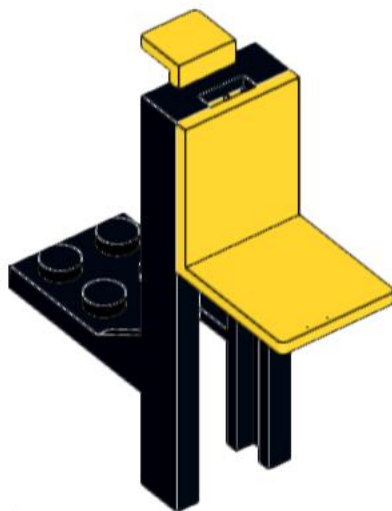

1x
3430c02
Black

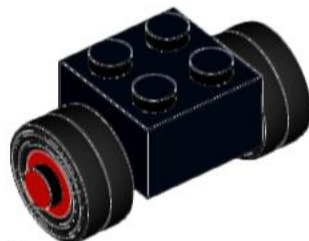

1x
3137c02assy1
Black